




Front Mounted Receiver Installation Instructions

Part Numbers:
65005

**Tahoe, Yukon, Full Size Blazer Chevy/GMC Pickup, Suburban,
1500 Series – All 2WD & 4WD, 2500 & 3500 Series – 4WD,
2500 Series 2WD 7200 Lb. GVW With 6 Lug Wheels**

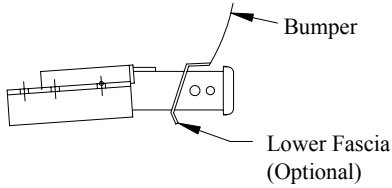

**CARGO CAPACITY – DO NOT EXCEED
500 LB. OR VEHICLE FRONT GROSS
AXLE WEIGHT RATING. (GAWR)**

9000	LB. MAX. WINCH LINE PULL
------	--------------------------


Receiver Shown In Proper Position

Equipment Required:

Fastener Kit: 01131-017

Wrenches: 10mm, 18mm, 7/8"

Drill Bits: 1/2"

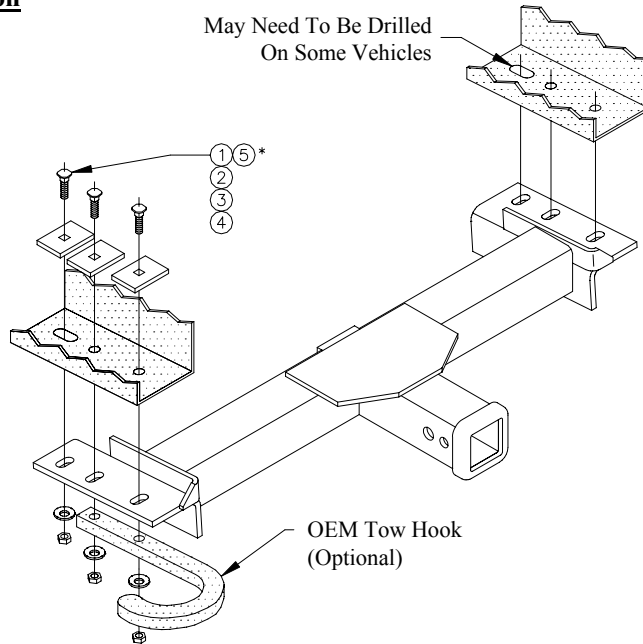

①	Qty. (6)	Carriage Bolt, 1/2"-13 x 1-3/4"	④	Qty. (6)	Nut, 1/2"
②	Qty. (6)	Spacer, 1-1/2" x 2" x 1/4"	⑤	Qty. (4)	Carriage Bolt, 1/2"-13 x 2-1/2"
③	Qty. (6)	Conical Washer, 1/2"	⑥	Qty. (2)	Pull Wire, 1/2"

* Use with optional OEM tow hook.

NOTE: If front mounted license plate is present, repositioning may be necessary.

1. If present, remove lower fascia under bumper.
2. If present, remove vehicle tow hooks.
3. Feed the fasteners shown above through end of frame using pull wire.
4. Raise hitch into position and attach fasteners and tow hooks as shown above.
5. If large slot is not present, drill a 1/2" hole using the hitch as a template.
6. If desired, trim and reinstall the lower fascia. **CONSULT VEHICLE OWNER BEFORE TRIMMING.**

Tighten all 1/2" GR5 fasteners with torque wrench to 75 Lb.-Ft (102 N-m).