


Front Mounted Receiver Installation Instructions Jeep Wrangler

Part Numbers:
65048

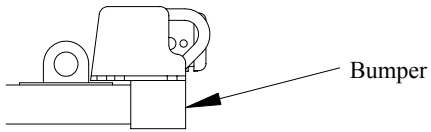

Receiver Shown In Proper Position

**CARGO CAPACITY – DO NOT EXCEED
300 LB. OR VEHICLE FRONT GROSS
AXLE WEIGHT RATING. (GAWR)**

9000

LB. MAX. WINCH LINE PULL

Equipment Required:

Fastener Kit: 65048F

Wrenches: 10mm, 15mm, T-45 or T-55

Drill Bits: None

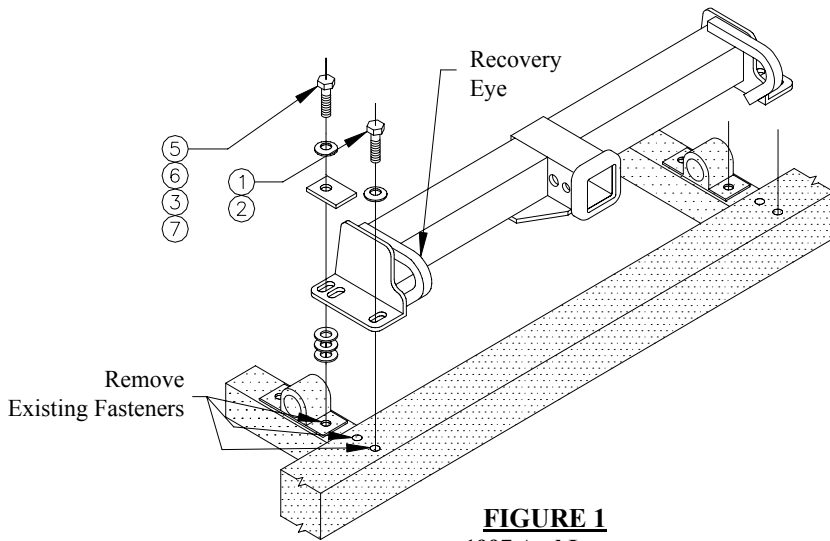


FIGURE 1
1997 And Later

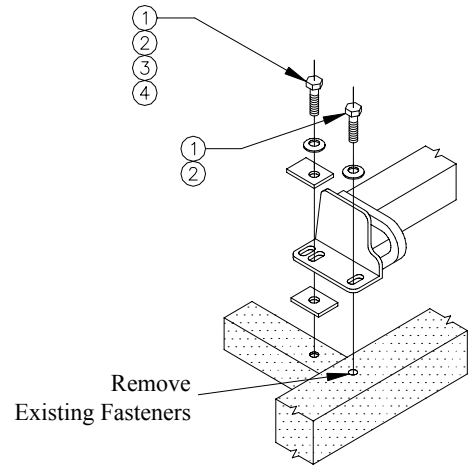


FIGURE 2
1987 Through 1996

①	Qty. (4)	Hex Bolt, 1/2"-13 x 1-3/4"	⑤	Qty. (2)	Hex Bolt, M10 x 1.50 x 45
②	Qty. (4)	Conical Washer, 1/2"	⑥	Qty. (2)	Conical Washer, 3/8"
③	Qty. (2)	Spacer, 1-1/2" x 2" x 1/4", Painted Black	⑦	Qty. (6)	Flat Washer, 7/16"
④	Qty. (2)	Spacer, 1-1/2" x 2" x 1/4", Zinc Plated			

1. Remove, if present, plastic shield, OEM tow hooks, and upper bumper bolts.
2. See proper figure for fastener installation.
3. If desired, trim and reattach plastic shield. **CONSULT VEHICLE OWNER BEFORE TRIMMING.**

NOTE: DO NOT REATTACH TOW HOOKS.

Cequent



Tighten all 1/2" GR5 fasteners with torque wrench to 75 Lb.-Ft (102 N-m).
Tighten all M10 CL10.9 fasteners with torque wrench to 50 Lb.-Ft (68 N-m).