

Installation Instructions

Part Numbers:

Acura MDX

75599


Honda Pilot

44589

87454

**Do Not Exceed Lower of Towing Vehicle
Manufacturer's Rating or**

Hitch type	Max Gross Trailer WT (LB)	Max Tongue WT (LB)
Weight Distributing	5000 (2270 Kg)	500 (227 Kg)
Weight Carrying Ball Mount	3500 (1589 Kg)	350 (159 Kg)

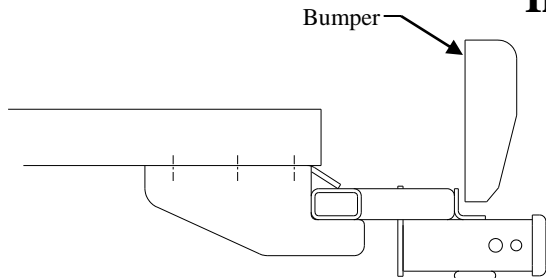

Hitch Shown In Proper Position


Equipment Required:

Fastener Kit: 75599F

Wrenches: 10mm, 14mm, 17mm, 19mm

Drill Bits: None

Wiring Access Location: SUV3

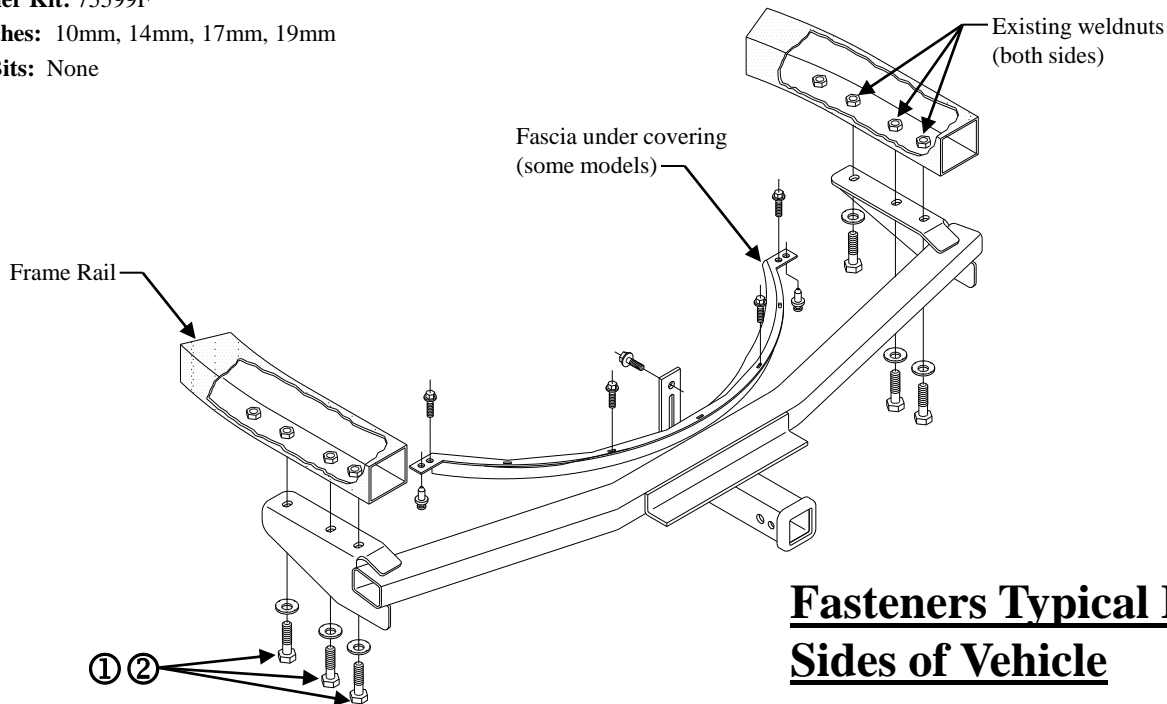

Fasteners Typical Both Sides of Vehicle

Fits with mini spare tire stowed under vehicle. Will not fit with full size spare.

①	Qty. (6)	Hex Bolt M12 x 1.25 x 35mm CL8.8	②	Qty. (6)	Conical Washer – 1/2"
---	----------	----------------------------------	---	----------	-----------------------

Note: Transmission cooler and Power Steering cooler are required for max. towing capacity (See vehicle owner's manual for details).

2001-2003 Acura MDX & 2001 and later Honda Pilot:

1. Remove tow hook from driver's side of vehicle and return hook and fasteners to vehicle owner.
2. Lower exhaust by removing three rubber muffler hangers.
3. Raise hitch into position and install fasteners as shown above.
4. Reinstall muffler hangers removed in step 2.
5. If exhaust rattle occurs, trim rearward exhaust heat shield between crosstube and muffler.

2004 Acura MDX

1. Remove tow hook from driver's side of vehicle and return hook and fasteners to vehicle owner.
2. Remove fascia under covering by removing bolts and fascia clips shown above and return to vehicle owner.
3. Lower exhaust by removing four rubber muffler hangers.
4. Raise hitch into position and install fasteners as shown above.
5. Reinstall muffler hangers removed in step 3.

Cequent

Tighten all m12 x 1.25 CL8.8 fasteners with torque wrench to 68 Lb.-Ft.

