

Installation Instructions


Part Numbers:

Dodge Durango

75713

87608

44662

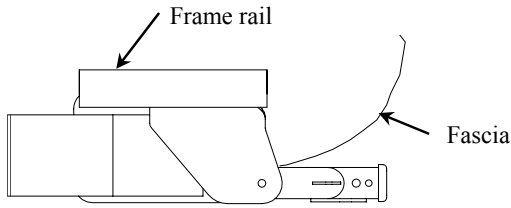

**Do Not Exceed Lower of Towing Vehicle
Manufacturer's Rating or**

Hitch type	Max Gross Trailer WT (LB)	Max Tongue WT (LB)
Weight Distributing	7500 (3405 Kg)	750 (341 Kg)
Weight Carrying Ball Mount	6000 (2724 Kg)	600 (272 Kg)

Hitch Shown In Proper Position


Equipment Required:

Fastener Kit: 75713F

Wrenches: 21mm

Wiring Access Location: SUV1, 2

**Note: Fasteners typical
both sides**

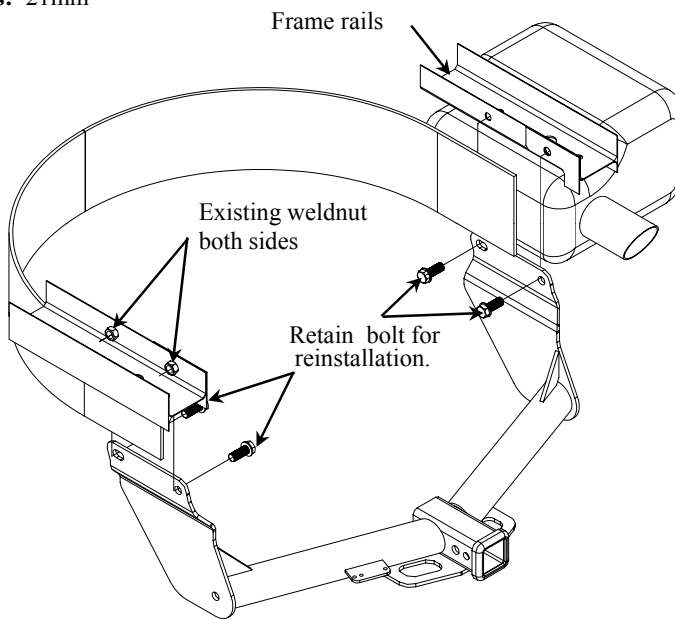

**Note: Uses all
existing Bolts
on Vehicle**

1. Lower the spare tire.
2. Remove (4) existing M14 bolts (Do Not clean the threads). Retain bolt for reinstallation.
3. Raise hitch into position as shown and install fasteners as shown. If excess caulking on the frame rail interferes with hitch installation lower hitch and scrape excess caulking for installation.
4. Tighten all fasteners to called-out torque specification.
5. Raise spare tire back into position.

Cequent



Tighten all M14 fasteners with torque wrench to 115 Lb.-Ft. (156 N*M)