

Installation Instructions

Part Numbers:

Mitsubishi Outlander

75888

44707

(Except Sport)

87656


**Do Not Exceed Lower of Towing Vehicle
Manufacturer's Rating or**

| Hitch type | Max Gross Trailer WT (LB) | Max Tongue WT (LB) |
|----------------------------|---------------------------|----------------------|
| Weight Distributing | 4000 (1816 Kg.) | 600 (272 Kg.) |
| Weight Carrying Ball Mount | 4000 (1816 Kg.) | 600 (272 Kg.) |

Wiring Access Location: SUV3, SUV4

Accessory Rating

C

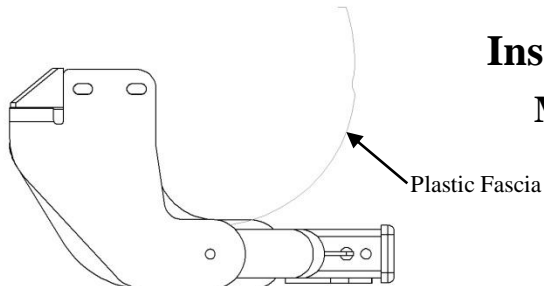

Plastic Fascia


Hitch Shown In Proper Position

Equipment Required:

Fastener Kit: 75888F

Wrenches: 14mm, 17mm, 3/4"

Drill Bits: None

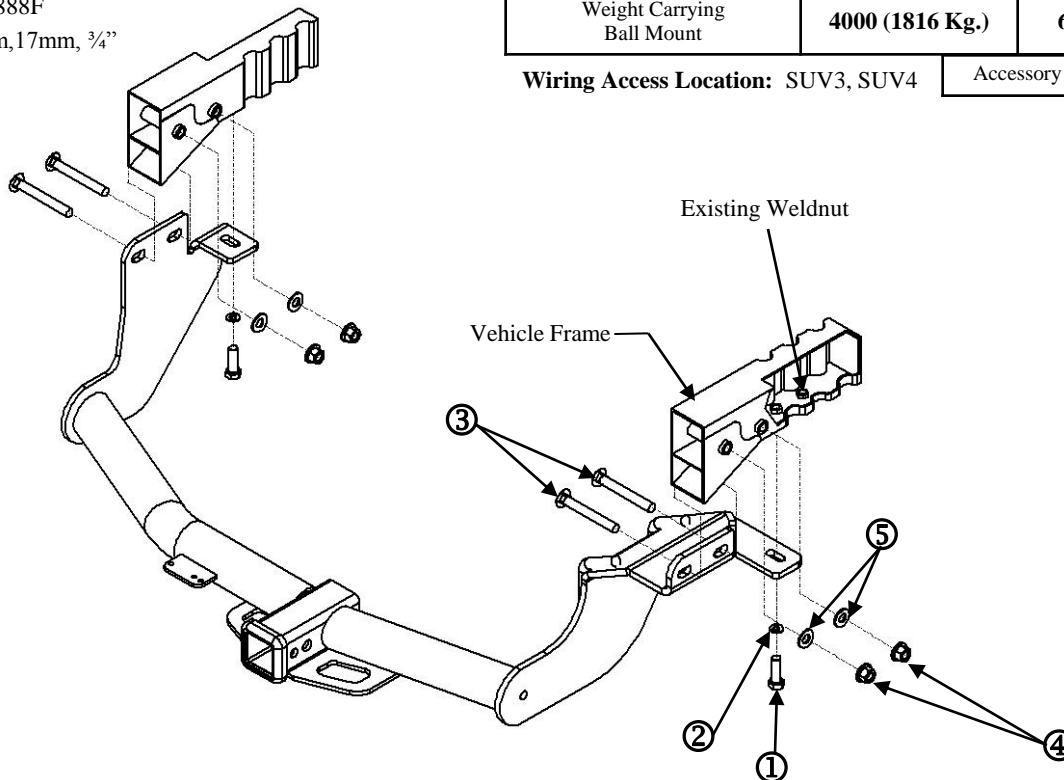

Note: All Fasteners Typical Both Sides of Vehicle.

| | | | | | |
|---|----------|------------------------------------|---|----------|---------------------------|
| ① | Qty. (2) | Hex Bolt – M10 x 1.25 X 40mm CL8.8 | ④ | Qty. (4) | Flanged Lock Nut – 1/2-13 |
| ② | Qty. (2) | Conical Toothed Washer – 3/8" | ⑤ | Qty. (4) | Hardened Flat Washer 1/2" |
| ③ | Qty. (4) | Carriage Bolt– 1/2-13 X 4-1/2 GR5 | | | |

Removal of spare tire will make installation easier.

- Lower exhaust by disconnecting (3) rubber exhaust hangers from muffler.
- Remove tow hook from driver side vehicle frame. Return tow hook & fasteners to owner.
- Raise hitch into position, install all fasteners as shown.
- Raise exhaust back into position by re-connecting rubber exhaust hangers (re-attach muffler to exhaust pipe if removed in step 1).

Tighten all M10 x 1.25 CL8.8 fasteners with torque wrench to 42 Lb.-Ft. (57 N*M)

Tighten all 1/2-13 GR5 fasteners with torque wrench to 75 Lb.-Ft. (102 N*M)

Cequent

