

**INSTALLATION INSTRUCTIONS FOR
DYNOMAX KIT: 19461**

2007-04 Dodge Ram 2500 / 3500 5.9L Diesel
Including Mega Cab Models, 2/4 WD



DANGER WARNING: SHOULD THE PURCHASER DECIDE TO INSTALL ANY EXHAUST PRODUCT AT HOME, BE WARNED THAT PASSENGER CAR OR LIGHT DUTY TRUCK/VAN "BUMPER" JACKS ARE INTENDED FOR EMERGENCY USE ONLY. THE USE OF FRAME CONTACT JACK STANDS IN CONJUNCTION WITH A FLOOR JACK AS MAIN SUPPORT IS HIGHLY RECOMMENDED TO MINIMIZE ACCIDENTAL DROPPING OF A VEHICLE DURING THE INSTALLATION PROCESS.

NOTE: Read all instructions before starting any work.


1. Remove the O.E. inlet pipe/muffler/tail pipe welded assembly from the vehicle. Lubricate the rubber isolators with WD-40, or a similar product, to aid in removal of the metal rod hangers. Do NOT remove the exhaust just ahead of the welded muffler assembly.
2. Slip a band clamp on the inlet end and install DynoMax inlet pipe 51036. Insert the metal rod hanger into the rubber isolator on the passenger side frame. Do not tighten the band clamps at this time.
3. Slip a band clamp over the inlet end and install DynoMax Ultra Flo Welded muffler **17557**. Do not tighten at this time.
4. Slip a band clamp over the inlet end and install DynoMax tail pipe **55426**. Insert the metal rod hangers into the three rubber isolators on the chassis and frame.

5. Beginning at the inlet end, align the system components and fully tighten all the clamps.
6. Please see the system diagram on the back page of these instructions.

KIT CONTAINS:

- (1) 17557 MUFFLER
- (1) 51036 INLET PIPE
- (1) 55426 TAIL PIPE
- (3) 4" BAND CLAMPS
- (1) 705021 INSTRUCTION SHEET

19461 SYSTEM DIAGRAM

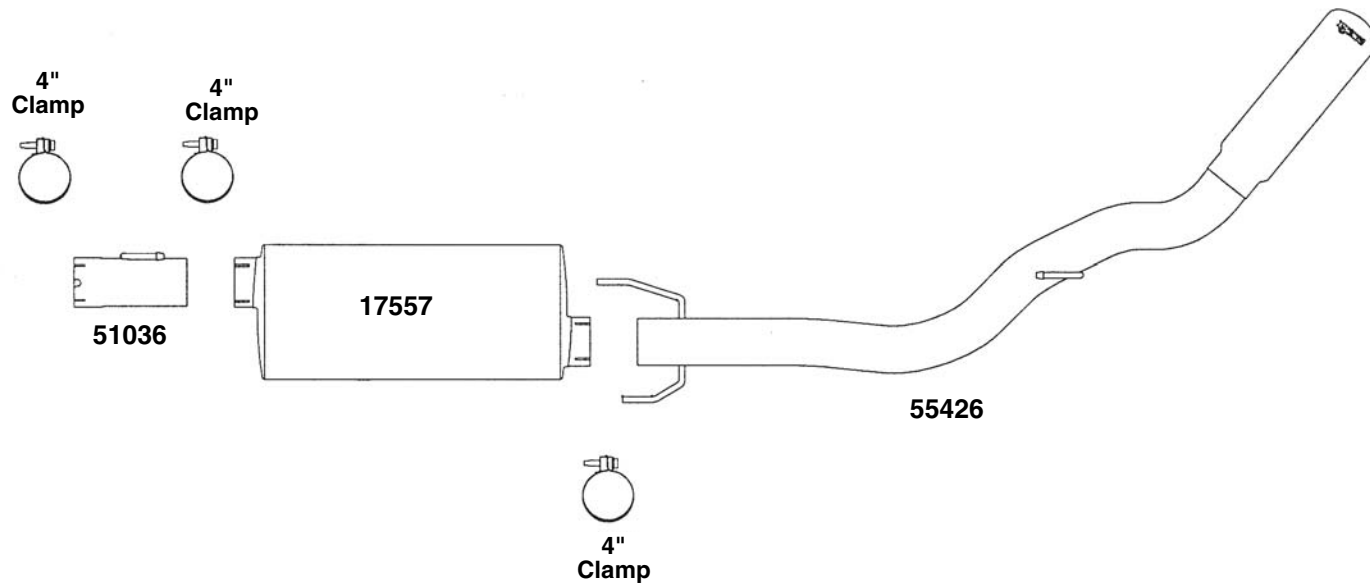

Look through our comprehensive collection of performance exhaust systems right away.