



Installation Instructions

Vibration Dampening Kit

A6600VDK Mounting Instructions: (Refer to Figure 1)

1. Drill 3/8" mounting holes in chassis.
2. Place [vibration dampeners](#) into chassis holes.
3. Align mounting boss holes with vibration dampeners.
4. Insert #10-32 x 1-1/4" screws through mounting boss holes and into vibration dampeners.
5. Tighten evenly until snug. Do not over tighten.
6. Install #10-32 hex nut to retain assembly.

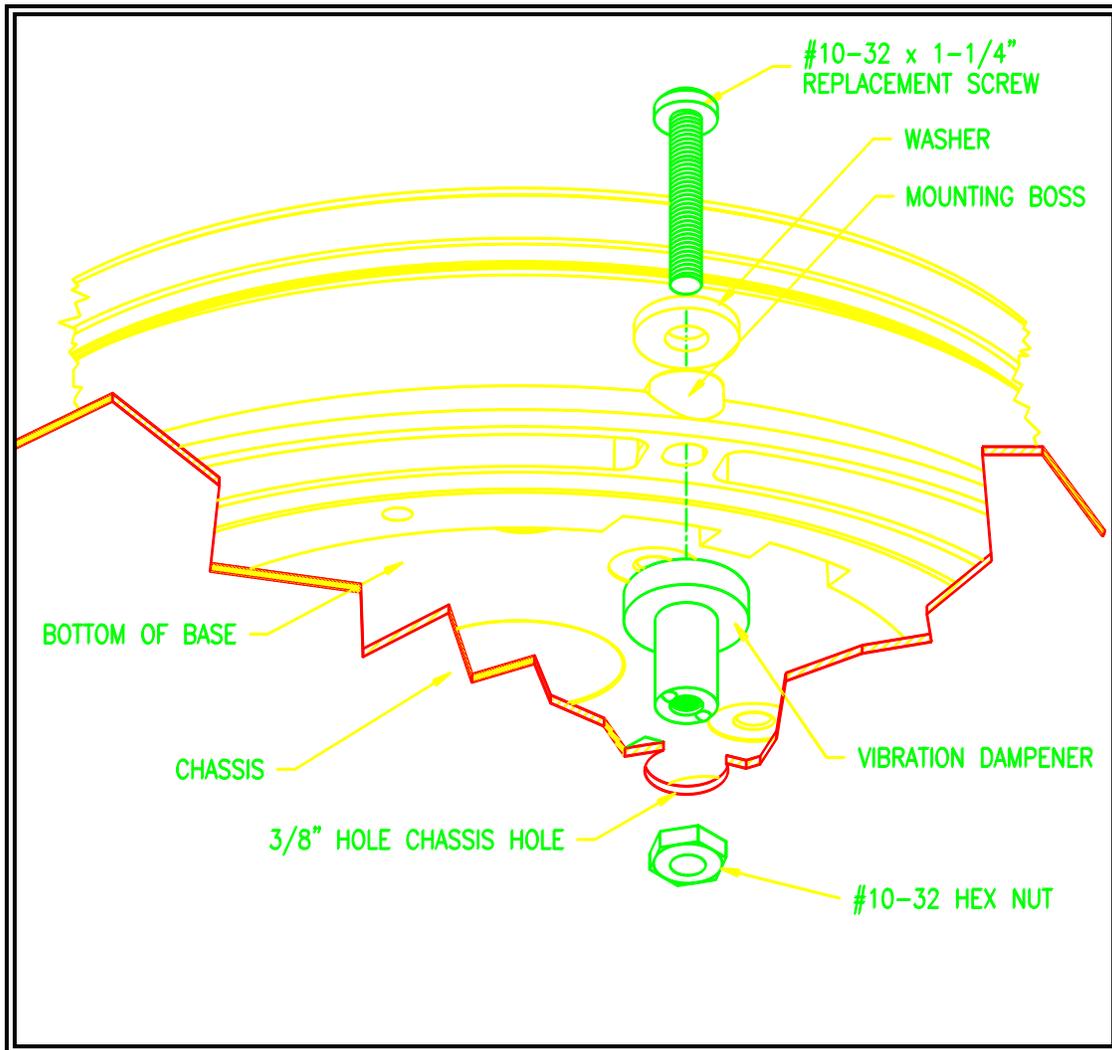


Figure 1