



Factory Connect Camera System: Toyota

All Models equipped with 6.1" Screen


1

Remove radio / multi-media assembly.




2

Unplug factory 16 pin plug and plug into female end of T-Harness. Plug male end of harness into rear of radio. Connect camera RCA cable to T-Harness.

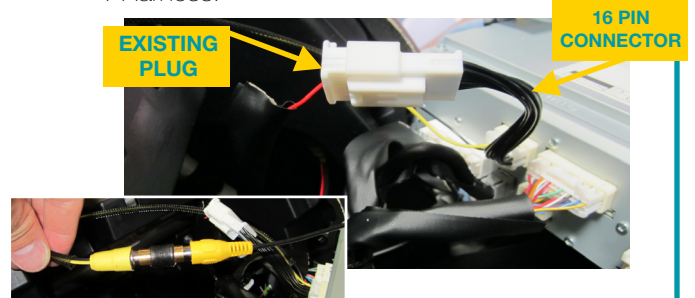

3

A. Connect camera Red wire to suitable ACC or IGN +12V. Ground camera Black wire.

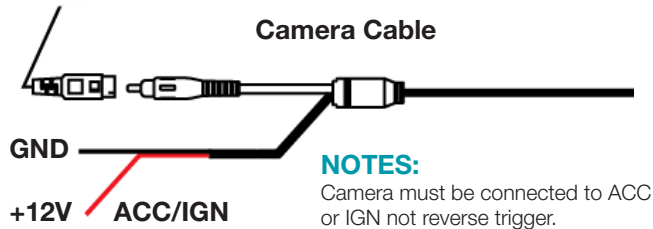

B. Route camera cable to rear of vehicle.

4

Use foam gasket to determine camera mounting location. Drill a 19mm hole, mount camera and secure with nut.




5

Connect the camera cable to the camera. Program optional Parking Lines and/or Image Flip.



Green Wire (Parking Lines)

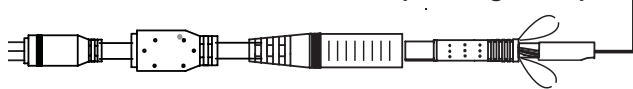

6

Check installation by putting vehicle in reverse to make sure image is correct. Reassemble all parts of the vehicle to complete installation.



Installation Guide



Factory Connect Camera System:

Toyota

For Models Equipped with 6.1" Screen

ATTENTION:

On some 2013 model year Toyotas, reverse trigger is not present at radio. You must add a pin to the 28 pin plug located next to the 16 pin plug provided by EchoMaster.

The pin will go in Pin# 2 located on the top row second pin from right (see diagram provided). Insert pin provided and connect to positive 12 volt reverse.

