



PERFORMER RPM AIR-GAP 351-C INTAKE MANIFOLD
For 351 c.i.d. Ford Cleveland Engines
Catalog #7564

INSTALLATION INSTRUCTIONS

IMPORTANT NOTE: Proper installation is the responsibility of the installer. Improper installation will void your warranty and may result in poor performance and engine or vehicle damage.

DESCRIPTION: The Edelbrock Performer RPM Air-Gap intake manifold is designed for high performance 351 c.i.d. Ford Cleveland engines operating in the 1500 to 6500 rpm range. Port exits are matched to 2V cylinder heads and the intake to cylinder head flanges are large enough to seal on 4V cylinder heads. The manifold will operate on both 2V and 4V applications. For 4V applications, no further port matching is recommended. Match the RPM Air-Gap intake manifold with other components designed to operate in the 1500 to 6500 rpm range for best results.

- **EGR SYSTEMS:** Intake manifold will not accept stock EGR (Exhaust Gas Recirculation) equipment. EGR systems are used on most 1972 and later model vehicles. Check local laws for requirements.
- **CARBURETOR RECOMMENDATIONS:**

CARBURETOR	CHOKE TYPE	PARTS REQUIRED FOR INSTALLATION
Performer #1407 (750 cfm)	Manual	#1493 or 1847 throttle plate kit, #1483 or 1844 throttle lever adapter
Performer #1411 (750 cfm)	Electric	#1493 or 1847 throttle plate kit, #1483 or 1844 throttle lever adapter
Performer #1412 (800 cfm)	Manual	#1493 or 1847 throttle plate kit, #1483 or 1844 throttle lever adapter
Performer #1413 (800 cfm)	Electric	#1493 or 1847 throttle plate kit, #1483 or 1844 throttle lever adapter
Thunder Series #1812 (800 cfm)	Manual	#1493 or 1847 throttle plate kit, #1483 or 1844 throttle lever adapter
Thunder Series #1813 (800 cfm)	Electric	#1493 or 1847 throttle plate kit, #1483 or 1844 throttle lever adapter

- **THROTTLE BRACKETS:** The throttle and kickdown bracket on some vehicles may require modification to fit. When using Edelbrock carburetors, use #1493 or 1847 throttle plate kit to line up the stock throttle bracket to the Edelbrock carburetor throttle lever.
- **GASKETS:** Do not use competition-style intake gaskets for this street manifold. Due to material deterioration over time, internal leakage of vacuum, oil, and coolant may occur.

INTAKE MANIFOLD	REFERENCE	RECOMMENDED GASKET
7564	(None)	Edelbrock #7265 Port: 1.52" x 2.16", .060" Thickness

NOTE: To ensure maximum performance and a proper seal, Edelbrock gaskets which are specifically designed and manufactured for use with Edelbrock parts must be used.

• **PREP AND TUNING FOR POWER:**

1. Due to design, the fuel / air mixture and cylinder charging is very efficient with the RPM Air-Gap manifold. Generally speaking, the stock jetting for a Performer Series or Thunder Series carburetor will not need changing. Specific applications may show an increase in power by tuning the fuel mixture.
2. Aftermarket distributor curve kits may be used with Performer RPM series manifolds.
3. Use modified or high performance cylinder heads such as our Performer RPM.
4. The compression ratio should be at least 9.5 to 1 to work properly with most camshafts designed for use in the 1500-6500 rpm range.
5. Installation of aftermarket headers, camshafts or both with an Edelbrock Performer RPM series manifold may lean carburetor calibration. Should this condition occur, recalibrate with a richer jet.

- **CAMSHAFT AND HEADERS:** Performer RPM Series manifolds are compatible with aftermarket camshafts and headers designed to work in the 1500-6500 rpm range. Header primary tube diameter should be 1-3/4".

INSTALLATION PROCEDURE

1. Use only recommended intake gaskets set when installing this intake manifold.
2. Fully clean the cylinder head intake flanges and the engine block end seal surfaces.
3. Apply Edelbrock Gasgacinch sealant P/N 9300 to both cylinder head flanges and to the cylinder head side of the gaskets, allow to air dry, and attach the intake gaskets.
4. Do not use cork or rubber end seals. Use RTV silicone sealer instead. Apply a 1/4" high bead across each block end seal surface, overlapping the intake gasket at the four corners. This method will eliminate end seal slippage.
5. Install the intake manifold and hold-down bolts. Torque all of the manifold bolts in two steps by the sequence shown in Figure 2 to 18-20 ft/lbs.

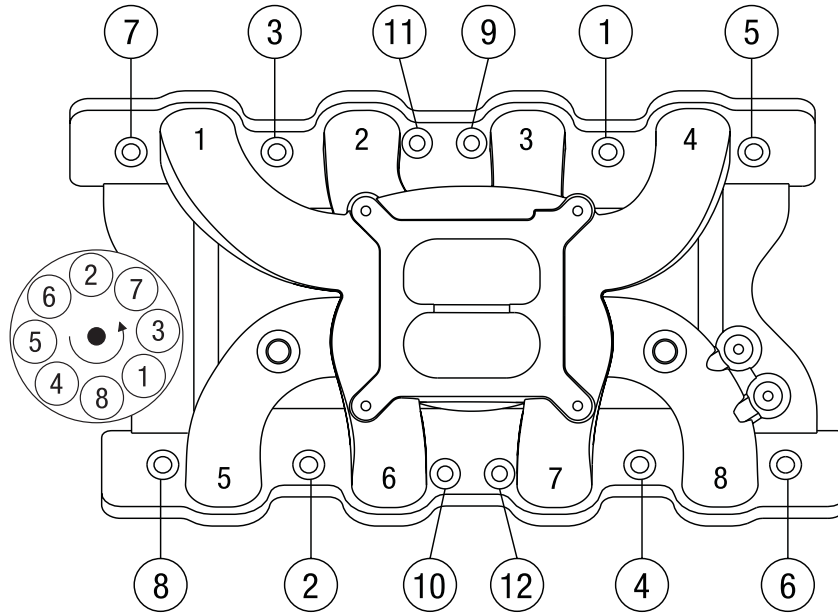


Figure 1 - 351-C Ford Torque Sequence
Torque Bolts to 25 ft/lbs.
Firing Order: 1-3-7-2-6-5-4-8
Turn Distributor Clockwise to Advance Ignition Timing