

JAMMER CAI

INSTALL GUIDE

2012-2014 Ford F-150
3.5L EcoBoost



TABLE OF CONTENTS

3	GETTING STARTED
3	PARTS LIST
4	INSTALLATION INSTRUCTIONS
4	REMOVING THE STOCK INTAKE ASSEMBLY
6	INSTALLING THE AIR FILTER
7	INSTALLING THE HOUSING
9	INSTALLING THE INTAKE TUBE

GETTING STARTED

PARTS LIST

Item	Description	Qty
1	CLAMP #052 (2-13/16"-3-3/4").....	1
2	COUPLING REDUCER (3-1/4"x 3").....	1
3	CLAMP #056 (3-1/16"-4").....	1
4	INTAKE TUBE.....	3
5	COUPLING, ELBOW SILICONE.....	1
6	CLAMP #072 (3"-5").....	1
7	HEAT SHIELD.....	1
8	TRIM SEAL (24.5").....	1
9	AIR FILTER.....	1
10	ADAPTOR.....	1
11	BUTTON HEAD SCREW.....	5
12	HEX SCREW.....	1
13	CLAMP # 064 (2-1/2"-4-1/2").....	1
14	COUPLING REDUCER (3.90" x 3-1/2").....	1



INSTALLATION INSTRUCTIONS


REMOVING THE STOCK INTAKE ASSEMBLY

CAUTION: Disconnect the ground cable from the battery before installation.

STEP 1 - Disconnect the Mass Air Flow (MAF) sensor plug from stock air box.




STEP 2 - Loosen the driver and passenger intake clamps.

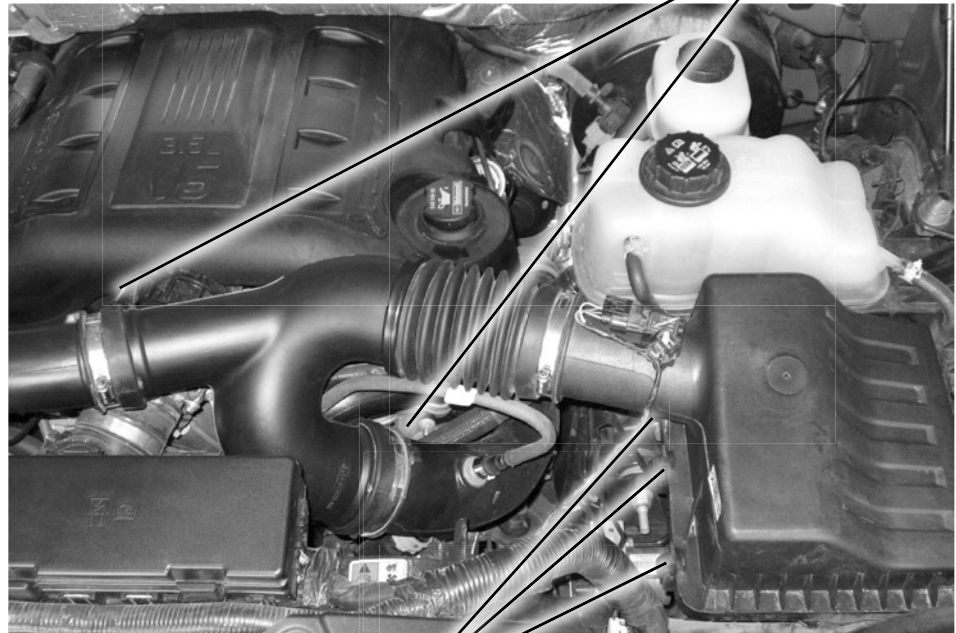

STEP 3 - Unclip the 3 housing clips that secure the top portion of the stock intake housing.

STEP 4 - Remove the stock intake tube by prying the passenger and driver side intakes first then remove the top portion of the housing.

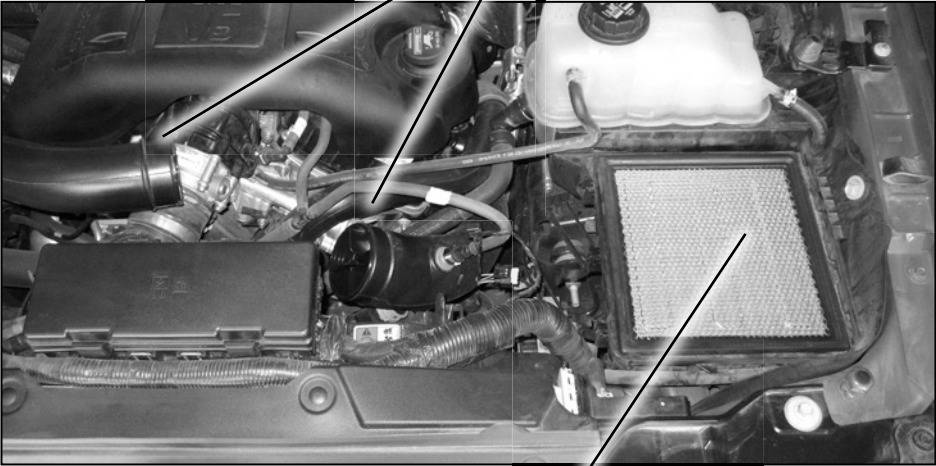

STEP 5 - Remove the stock filter from lower portion of the housing.

INSTALLING THE AIR FILTER

STEP 6 - Install the adaptor onto the Jammer housing using the five (5) button head screws provided with a 5/32 hex key.




STEP 7 - Install the elbow coupling onto the adaptor using provided clamps. (Do not tighten).

STEP 8 - Install the seal trim around the edges of the housing.

STEP 9 - Install the filter.

INSTALLING THE HOUSING


STEP 10 - Install the Jammer housing on top of the lower portion of the stock housing. Clamp down using factory clips.

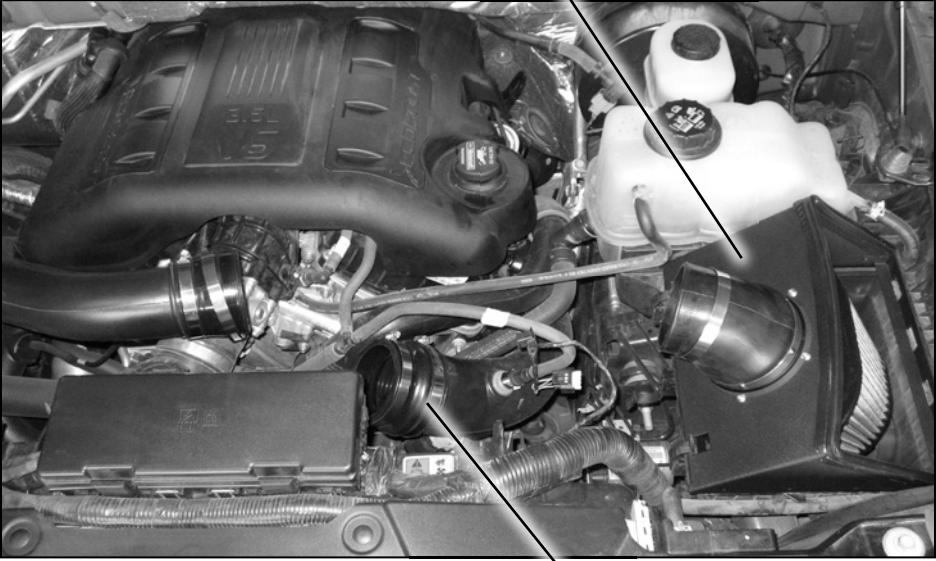

STEP 11 - Install the larger reduction coupling on the driver side runner. Clamp down but do not tighten.

STEP 12 - Install the smaller reduction coupling on the passenger side runner. Clamp down but do not tighten.

STEP 13 - Remove the MAP sensor from the stock air box using 5/32" 6-point socket.

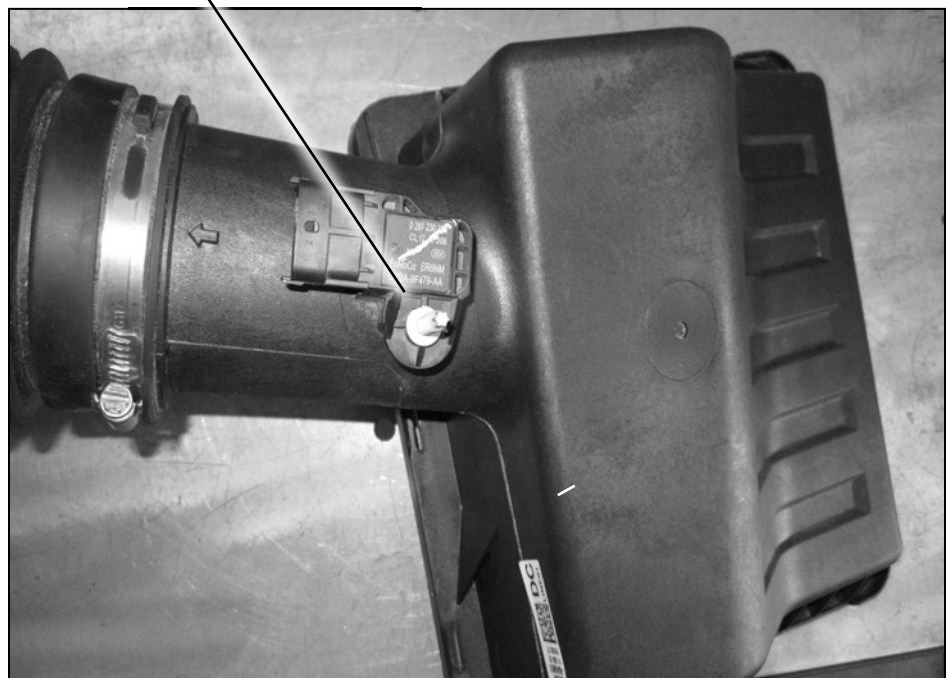


STEP 14 - Install the map sensor onto the Jammer intake tube using the hex head screw provided with a 10mm socket.



INSTALLING THE INTAKE TUBE

STEP 15 - Install the Jammer intake tube passenger side runner first and then the driver side runner, followed by inserting the tube onto the adaptor coupling elbow.

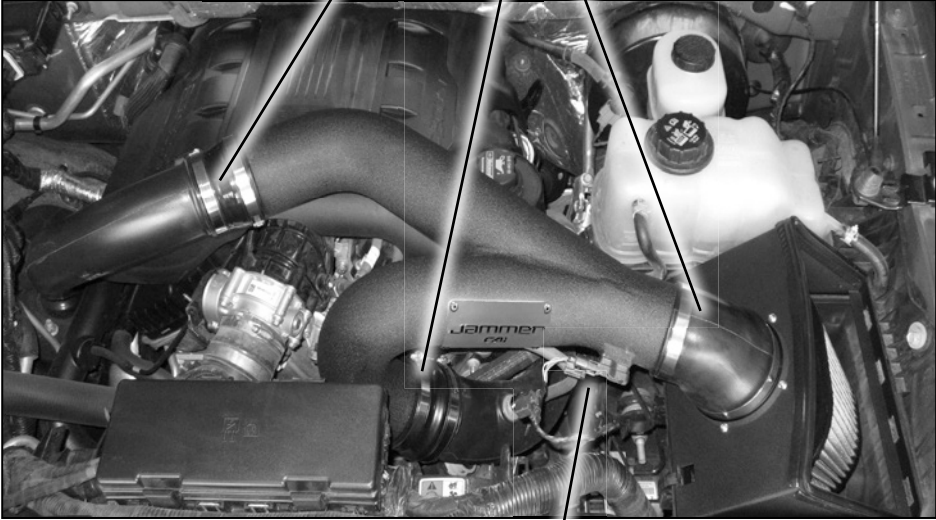

STEP 16 - Adjust the couplings and the tube for proper alignment and then tighten all clamps.

STEP 17 - Reconnect the MAF sensor plug.

STEP 18 - The installation is now complete!

NOTE: Verify all connections are secure 100-200 miles after installation.

[View other performance air intake systems made by Edge on our website.](#)