

# EGR

## FRONT DOOR INSTALLATION

BEFORE  
INSTALLING  
PRODUCT,  
PLEASE READ  
INSTRUCTIONS  
FULLY

INSTALLATION  
INSTRUCTIONS

™

IN-CHANNEL  
SLIMLINE  
WINDOW VISOR

DO NOT  
INSTALL BELOW  
50°F. IDEAL  
INSTALLATION  
TEMPERATURE  
IS 70°F - 105°F.

MADE IN USA

### INSTALLATION INSTRUCTIONS

- 1• Clean and dry the vehicle. Lower the front windows completely.
- 2• Fit the front section of the **WINDOW VISOR** behind the mirror base. Ensure the bottom edge of the **WINDOW VISOR** locates on top of or over the lower window molding, as shown.
- 3• Fit rear section of **WINDOW VISOR** into channel about 1/2 inch away from the top of door frame, as shown.

#### IMPORTANT

When fitting the **WINDOW VISOR** it will be necessary to bend the center of the **WINDOW VISOR** away from the vehicle to enable fitment into the rear section of the door channel.

CARE MUST BE TAKEN AS THE PRODUCT COULD BREAK.

- 4• Start inserting the **WINDOW VISOR** by carefully rotating the **WINDOW VISOR** into the window channel.







#### IMPORTANT

Working from the front of the **WINDOW VISOR** to the back as shown. Once installed gently push the **WINDOW VISOR** upwards into the window channel.

- 5• Ensure the **WINDOW VISOR** is located in the outermost section of the rubber window channel and finally, raise and lower the window approx. 5 times to help seat the **WINDOW VISOR** into the rubber window channel.

**IMPORTANT:** Before fitting product, read instruction fully. Reverse the above procedure to remove this product.

**TO CLEAN:** Use mild detergent and water solution. (Do NOT use solvents). Avoid the use of automatic "Brush Style" car washes.

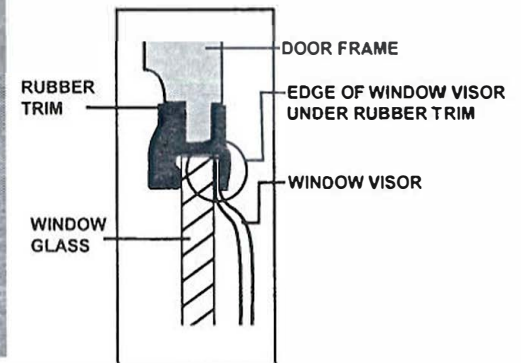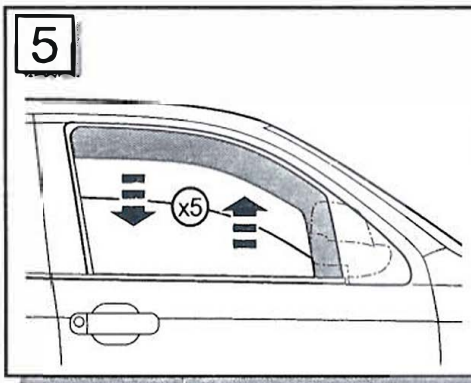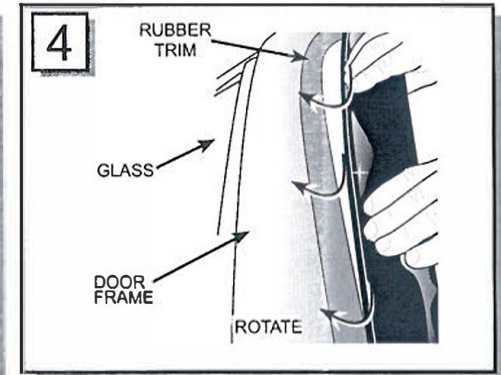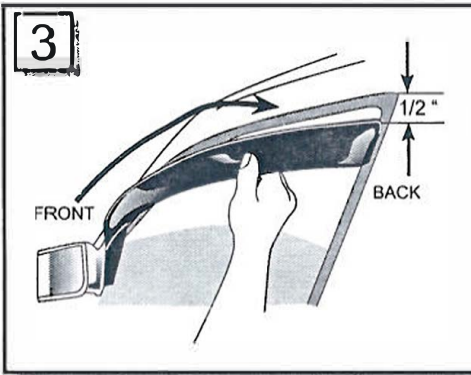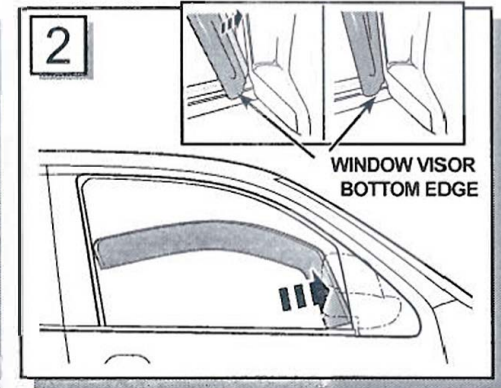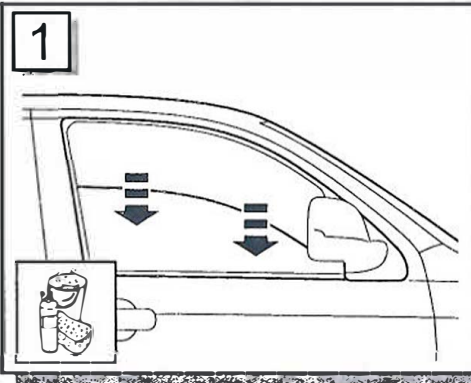

#### **IMPORTANT**

The rubber window trim may need to be massaged to allow the window and **WINDOW VISOR** to seat correctly in the window channel.