


EGR


INSTALLATION INSTRUCTIONS

SLIMLINE™ WINDOW VISOR


**IMPORTANT: BEFORE FITTING PRODUCT READ INSTRUCTION FULLY.
FULL TAPE STRENGTH IS ACHIEVED AFTER 72HRS
ALLOW TAPE TO CURE FOR 4HRS BEFORE DRIVING VEHICLE**

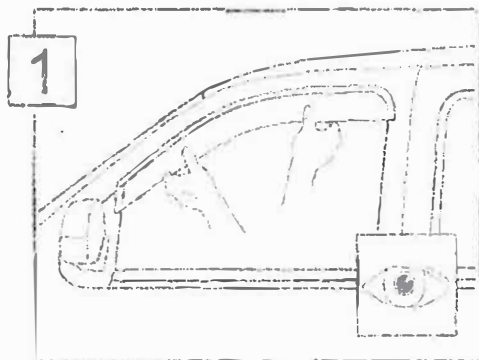


- Clean and dry upper door frame.
- Trial fit Slimline Window Visor onto door frame.
- Note tape attachment areas
DO NOT REMOVE TAPE LINER.

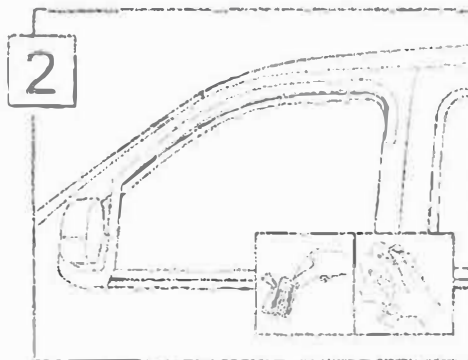


- Clean tape attachment areas thoroughly on door frame with alcohol wipe provided
- Wipe dry with a clean cloth

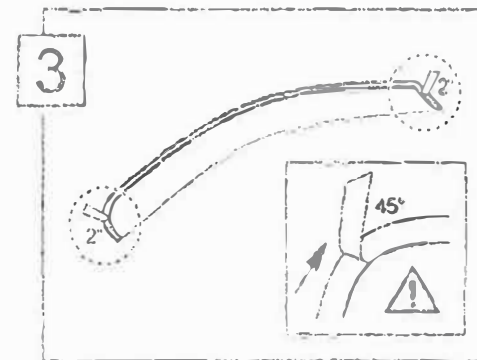


- Peel back approx. 2" (50mm) of tape liner from EACH of the tape sections and fold at 45° to outside of Slimline Window Visor.
DO NOT TOUCH EXPOSED SURFACE OF TAPE.

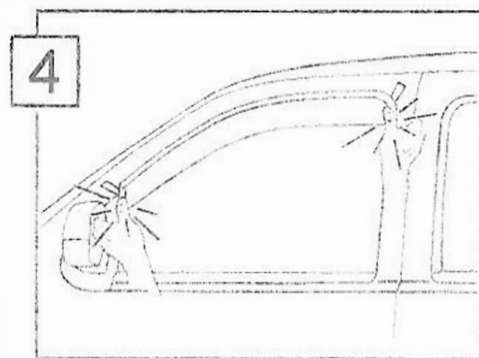

- Position the Slimline Window Visor on the door frame
- Double check positioning of Slimline Window Visor as per step 1, then apply light pressure to exposed tape areas

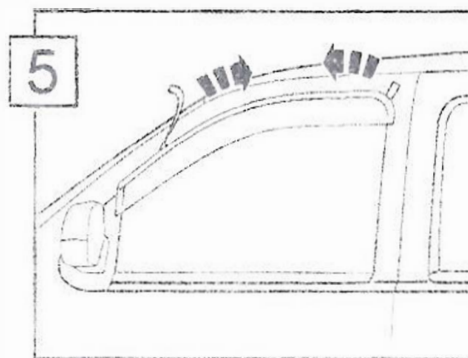

- Peel remaining tape liner by pulling on exposed ends of liner, and apply firm pressure around attachment areas

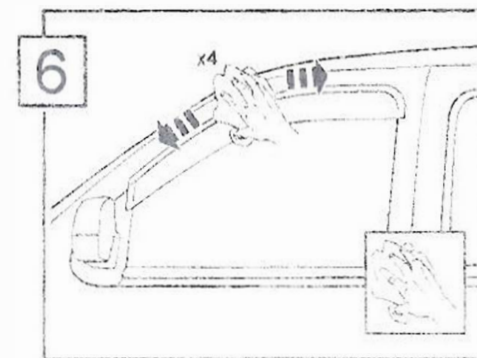

- Using a clean, soft cloth rub down firmly around attachment areas **4** times to ensure maximum adhesion.

BEFORE
INSTALLING
PRODUCT,
PLEASE READ
INSTRUCTIONS
FULLY

DO NOT
INSTALL BELOW
50 F. IDEAL
INSTALLATION
TEMPERATURE
IS 70 F - 105 F