


INSTRUCTION SHEET FOR SETS 11-5102 11-5103



Read this instruction sheet thoroughly before initiating any work!

The original rubber in eyes of the end link are bonded. With end link removed from the vehicle, the outside area of the eyes must be heated to break the bonding, all old rubber must be removed. Apply a light coat of supplied grease to O.D. and I. D. of bushings. Apply a light coat of grease to the I.D. of the frame bushing and to the O.D. of sway bar at bushing mounting area.

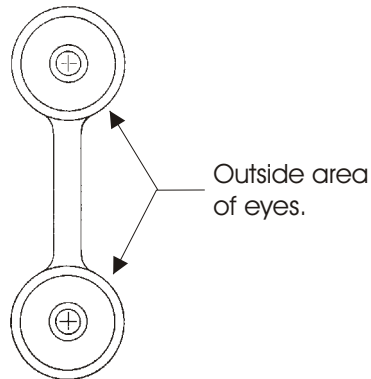

Learn more about suspension parts on our website.