


INSTRUCTION SHEET FOR SET #4.4114

Read this instruction sheet thoroughly before initiating any work!

ENERGY
SUSPENSION 

It is recommended that if you are unfamiliar with this type of work that you refer to a qualified service center specializing in this type of work. It is also recommended that if you choose to do this work yourself that a factory service manual be obtained for the proper procedures pertaining to removal, replacement and proper torque specifications for your vehicle. This instruction set is intended as a guideline for the safe installation of Energy Suspension's Polyurethane.



1. Once you have removed the trim panels, rear seat, and pulled the carpet back, loosen positions 1,2,3 and remove the bolts on the opposite side of the vehicle. Now, to prevent the body from twisting or crushing, using jacks, evenly lift the body on one side of the car making sure the jack heads are on a rigid part of the body.
2. Remove all factory mounts and hardware and replace with Energy Suspension bushings and hardware and tighten bolts **snug only!**
3. Now lift other side and repeat step 2.
4. When all bushings and hardware are installed, tighten to factory specifications. Installation is reverse of removal.

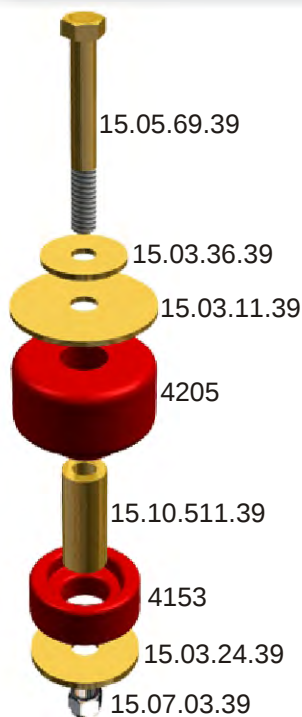

POSITIONS 1,2



POSITION 3

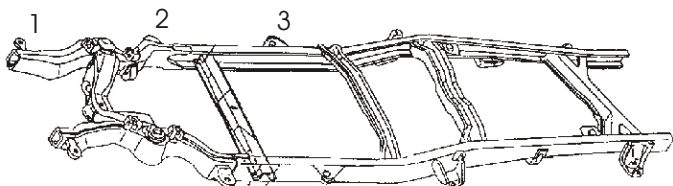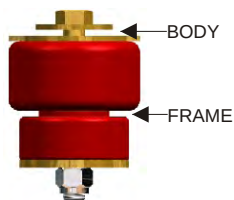

NOTE:

If you are having trouble removing the lower body mounts, use a larger washer and a deep sleeve to fit over the lower mount and tighten the factory bolt back into the upper body mount from under the truck. This will act as a puller device to remove the lower body mount.
(See picture at right)



Remove trim panels.



Remove rear seat bolts.



Lift back carpet in extended cab.



Lift back carpet in passenger area.



Remove body mounts.

Learn more about suspension parts on our website.