

Installation instructions

For set # 11.7102

1979-85 Mazda RX-7

Watts link bushings



Parts list:

2 - 2253 (watts link bushing).

1 - 15.10.74.39

(sleeve .875"O.D. x .715" I.D. x 2.000"LG).

1 - 15.03.56.39

(washer 2.00"O.D. x .715" I.D. x .1"THK).


8 - 2250 (right & left link bushing).

4 - 15.10.231.39

(sleeve .688"O.D. x .480" I.D. x 1.590"LG).


1 - 17133 (this instruction sheet).

REMOVING ONE PIECE STYLE BUSHINGS

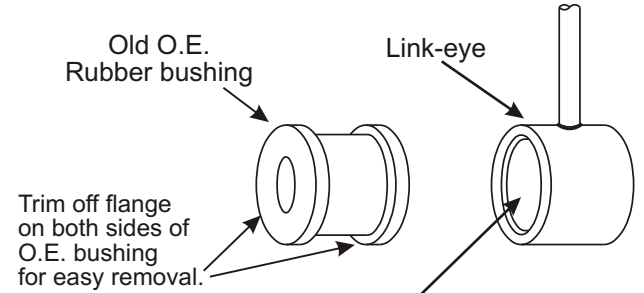

REMEMBER: Remove all old rubber from inside of link eye, this old rubber must be removed.

Apply grease to all metal parts that contact the polyurethane bushings.

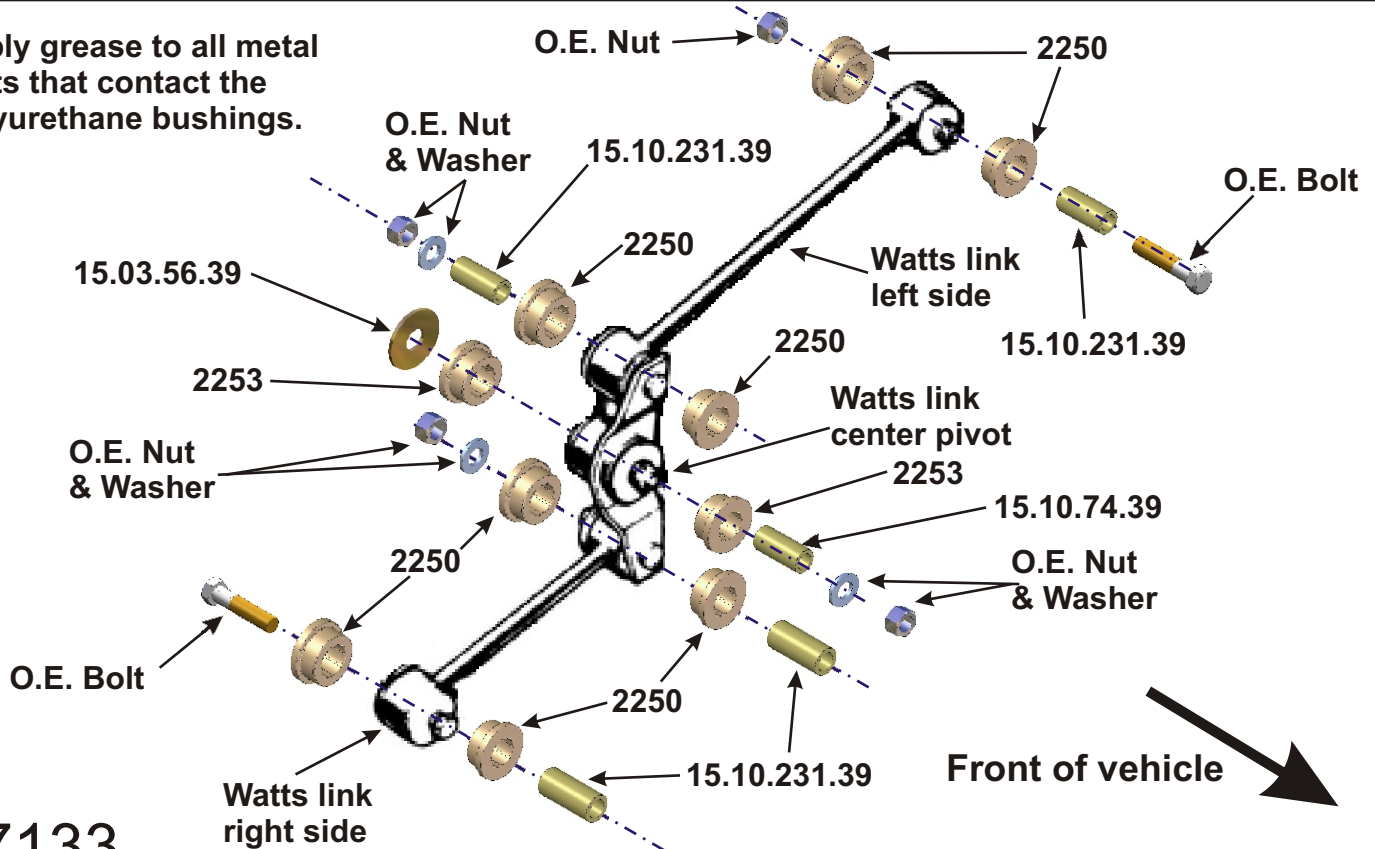

17133

Picture is for position reference only.
Actual parts may differ in shape and size.