

# Instruction Sheet #3.3187

## Front Control Arm Set

### YOU MUST REMOVE THE OEM SHELL FROM THE ARM.


Once the OEM shell and bushing have been removed, clean out the eye of the arm. Also remove any sharp burrs in the metal. Now grease the ID of the arm and the OD/ID of bushing #2599. Install #2599 in from the front (see pic). Install the #2600 thrust washer bushing over #2599. Now install supplied sleeve. Reinstall arm and now tighten all bolts back to factory specifications.

### NOTE:

Due to design constraints and safety concerns, no bushings were made for the strut arm positions. These positions are seen by an X. (see pic)

### Bill of Materials:

- 2 - 2599 Bushing
- 2 - 2600 Thrust Washer
- 2 - 15.10.170.39 (0.750"x0.480"x2.400")
- 2 - 9.11108 Grease packet

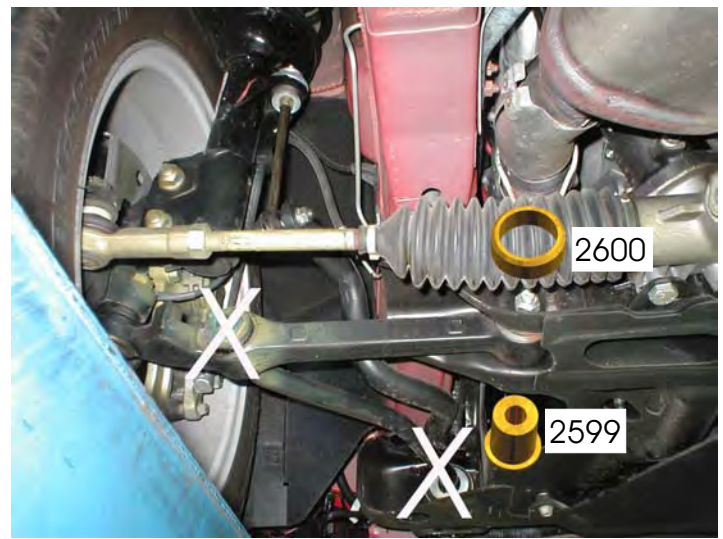

17439