

Installation instructions

For set # 3.3190

1999-04 CHEVY / GMC



K1500 SILVERADO / SIERRA 4WD

ENERGY
SUSPENSION 

Parts list: Energy Suspension recommends that you **read over all the installation instructions** and check all P/N's and quantities in the parts list **before you start**. Call customer service at 949-361-3935 if the parts in your kit do not match this parts list.

- 4 - 3426 (upper bushing) (must reuse shell, inner sleeve and cap washers).
- 2 - 3375 (lower front bushing).
- 2 - 15.10.413.39 (lower front sleeve 1.00"O.D. x .640" I.D. x 2.950"LG).
- 2 - 3376 (lower rear bushing).
- 2 - 15.10.414.39 (lower rear sleeve 1.00"O.D. x .640" I.D. x 3.860"LG).
- 2 - 8319 (lower shock bushing, front casting side).
- 2 - 8320 (lower shock bushing, rear machine side).
- 2 - 15.10.524.39 (lower shock sleeve 1.00"O.D. X .563" I.D. X 1.340"LG).
- 4 - 15.07.25.40 (lock nut for lower control arm bolts 16mm X 2.00mm).
- 8 - 9.11108 (grease).
- 1 - 17440 (this instruction sheet).

Apply grease to all metal parts that will contact the polyurethane bushings.

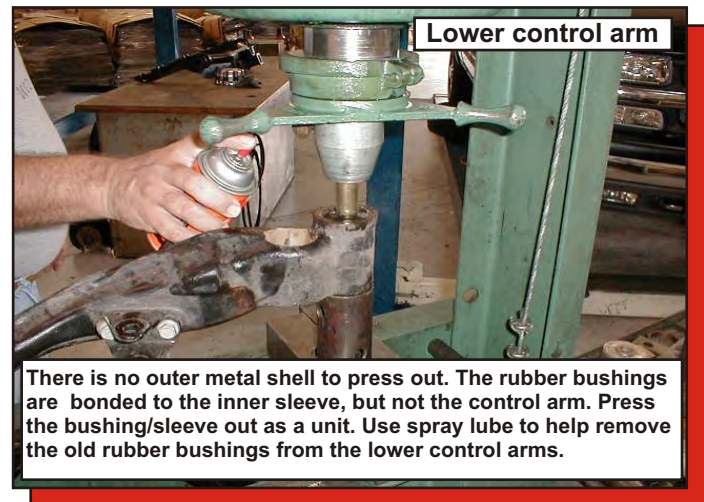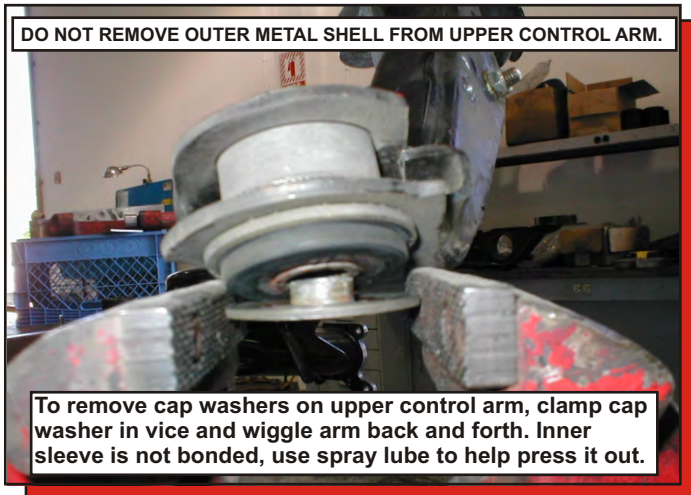

17440