



# Installation Instructions



17236

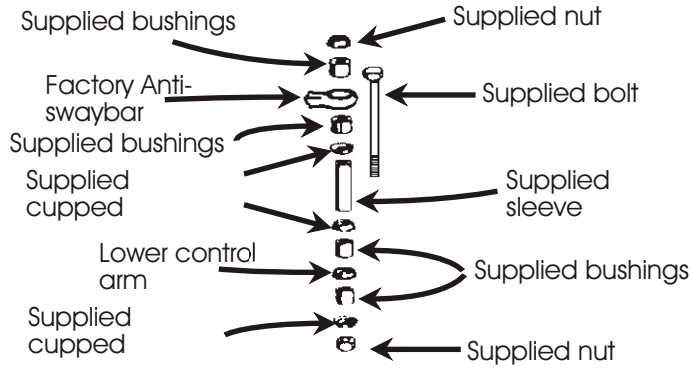

**"Standard style" endlink**

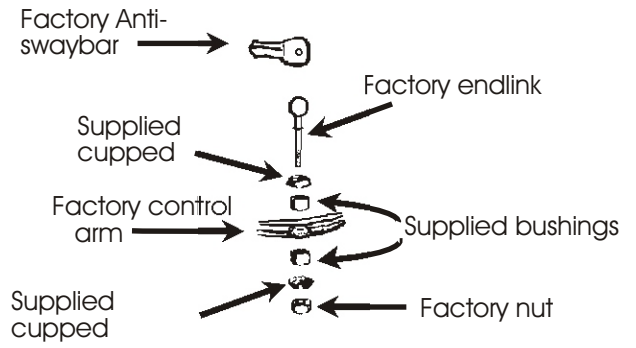

**"Tie-rod style" endlink**  
(uses **only** the parts shown above)

Many Import vehicles come with one of the style endlinks shown above. The "standard style" will use all of the parts supplied in the kit. The "Tie-rod style" will only use the supplied cupped washers and the supplied grommets(bushings). All other parts are not used on the "Tie-rod style" endlink.