


Universal Instructions for rod-eye / track bar bushings



Remove original rubber, clean I.D. of eye of any old rubber or rust. When installing polyurethane bushings, apply grease as instructed: Apply light coat of grease to I.D. of the rod-eye. Apply light coat of grease to the I.D. and O.D. of bushings (all surfaces that contact metal). Apply light coat of grease to the O.D. of sleeve. Apply light coat of grease to the faces of the bushings after they are installed.

TWO PIECE STYLE BUSHING


Sleeve
(NOTE: If not supplied in set, original sleeve/shoulder bolt must be re-used.)

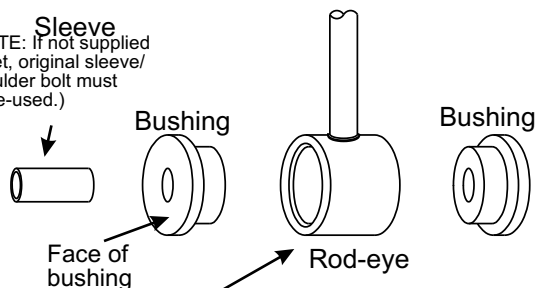

REMEMBER: Some O.E. bushings use an outer metal shell, this outer shell must be removed.

ONE PIECE STYLE BUSHING

Sleeve
(NOTE: If not supplied in set, original sleeve/shoulder bolt must be re-used.)

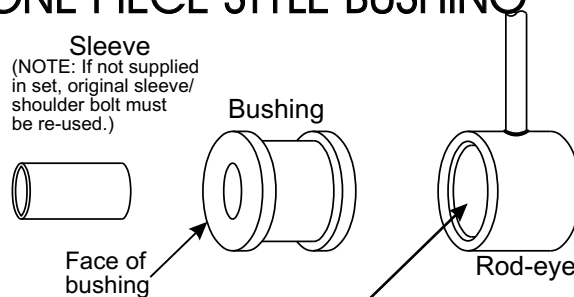

REMEMBER: Some O.E. bushings use an outer metal shell, this outer shell must be removed.

17073