

Instruction Sheet #4.7128 Track Rod Bushing Set




Remove original rubber/shell, Clean I.D. of eye of any old rubber or rust. When installing polyurethane bushings, apply grease as instructed. Apply light coat of grease to I.D. of the rod-eye and the I.D. and O.D. of bushings (all surfaces that contact metal), and the O.D. Of the sleeve. Install the bushing first then install the inner metal sleeve. Reinstall arms and tighten all bolts/nuts to factory specifications.

WELDED STEEL STYLE ARM



NOTE: There will be two extra bushings depending on which arm you have, discard the unused bushings.
NOTE: The supplied sleeve will work for either type of arms.

ONE PIECE CAST STYLE ARM

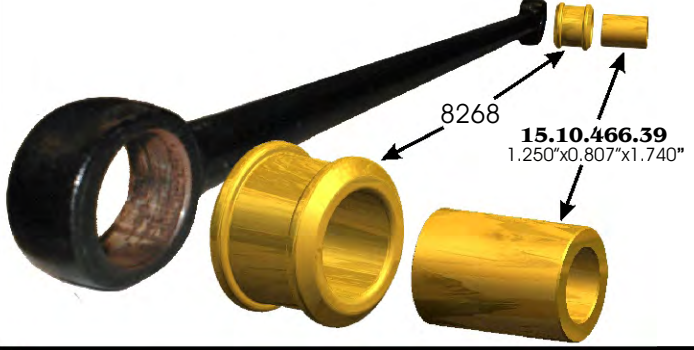

17433