

# Installation Instructions

For set # 3.1153  
2010 Camaro Diff Bushings


## Parts list:

- 6 - 1271 Diff Bushing
- 3 - 15.10.472.39 Rear Position Sleeve
- 1 - 17551 Instruction Sheet

1. With the diff out and on the table, you need to pry up the flange on the stock bushing so your tooling will have something to grab on to. (See Picture)



2. You will need to press the old bushings out. Using one of these process (See Picture Below)

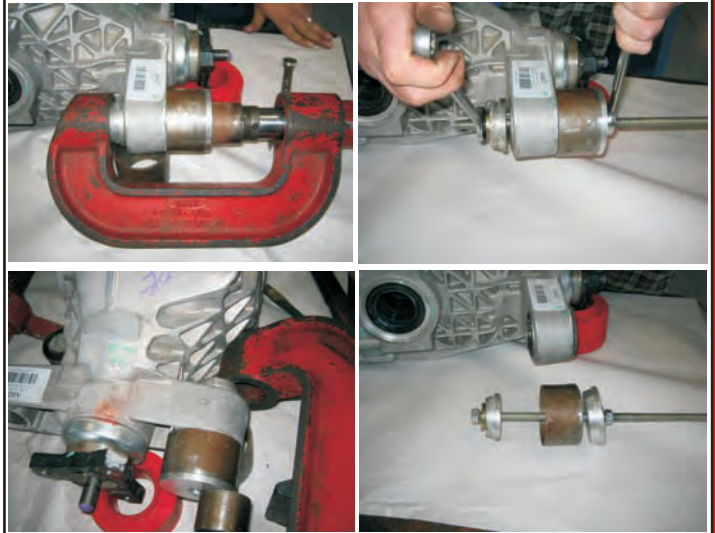

3. Then press in the new bushings and the sleeve. (See Picture)



**TORQUE SPECS.**  
For set # 3.1153  
2010 Camaro Diff Bushings

17551