

Instructions

Remove engine mounts from vehicle and clean thoroughly. Apply heat to the rubber inserts and remove all old rubber and inner sleeve from inside the metal shells. Be sure all rubber is removed!

Install new polyurethane engine mount inserts as shown in photos. Install new inner metal sleeves being sure that polyurethane inserts remain fully pressed in.


Install engine mounts back into vehicle being sure to check hood clearance before closing hood.

Retorque to factory specs.

INST.#17351



Remove rubber and metal sleeve from inside the metal shell.

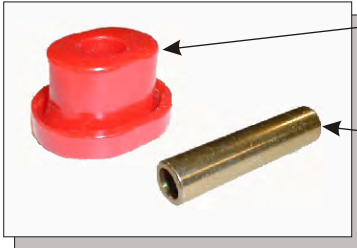

Polyurethane engine mount insert.

Inner metal sleeve.



Complete engine mount assembly.