

Mustache Bar Bushings:

With the car raised and supported **on the frame**. Remove the three bolts from the center of the mustache bar. Also, remove the two bolts on the ends of the bar.

Now remove the subframe bolts and lower the subframe enough to allow clearance to remove the mustache bar. Using a press, use two sleeves (pressing sleeve O.D. Smaller than 2.360", receiving sleeve I.D. Bigger than 2.360"). Remove the mustache bar bushings.

Install Energy Suspension bushings and sleeves per below picture. No grease needed, reinstall mustache bar and tighten all bolts.


Differential Carrier Bushings:

With the mustache bar and subframe **secure**, take off one diff carrier bracket. **ONLY DO ONE AT A TIME!** This provides support for the differential.

Remove one bracket. Using a press, remove the bushing. This time, use two sleeves (pressing sleeve O.D. Smaller than 1.760", receiving sleeve I.D. Bigger than 1.760") Install Energy Suspension bushings, sleeves and washers per diagram below.

No grease needed. The bushing with big flange **#2560** goes on the bottom with the thin washer **# 15.03.16.39**.

Install bracket and all bolts but do not tighten yet, wait until other side is done and then tighten all bolts to factory specifications.

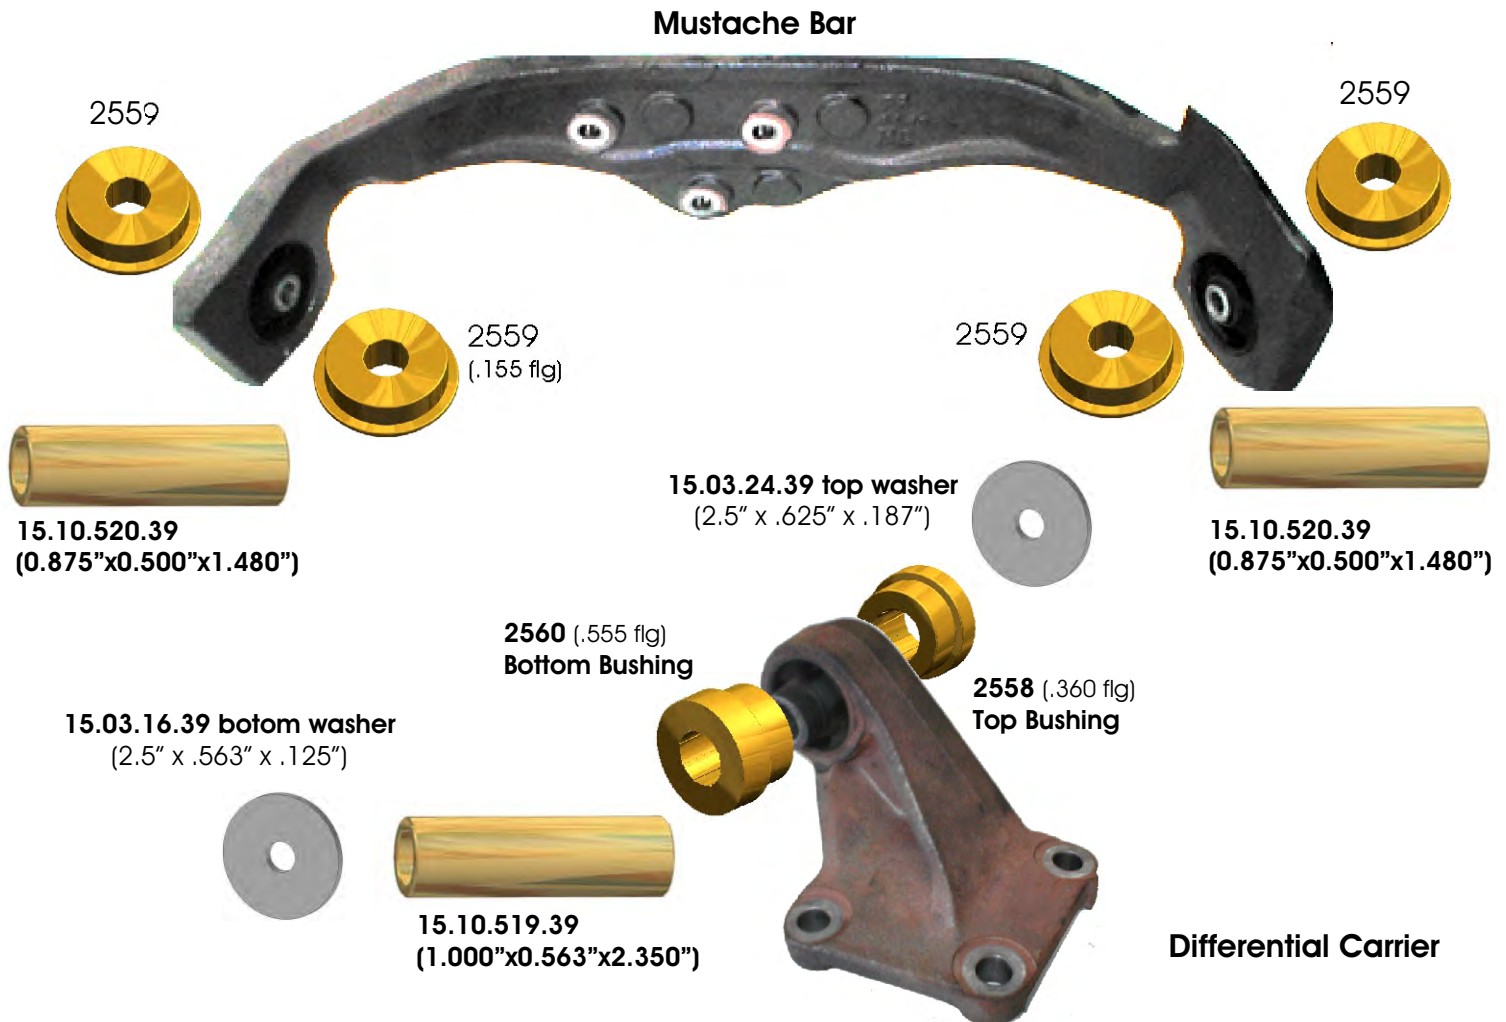

17400