


# INSTRUCTION SHEET FOR SET #7-1102

Read this instruction sheet thoroughly before initiating any work!

**ENERGY**  
**SUSPENSION** 

**NOTE:** Original shell must be reused. Do not remove shell from the eye of the mustache bar. With the bar removed from the vehicle, use heat to de-bond the rubber from the shell. This inside area of the shell must be cleaned of all old rubber before installing the new urethane bushings.

**IMPORTANT:** Apply a light coat of supplied grease to the I.D. of the shell. Apply a light coat of grease to the I.D., O.D. and flange of the bushings.

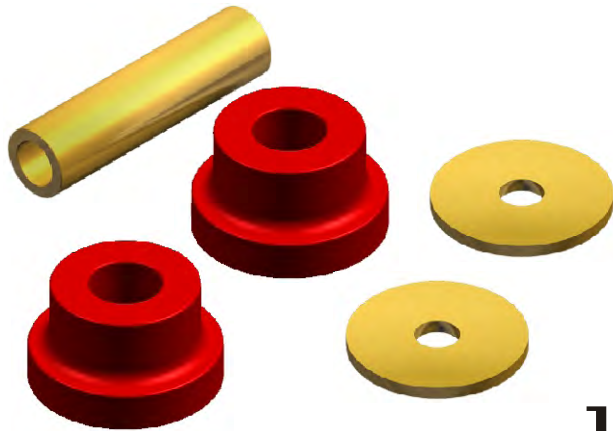

**17064**

