

# INSTRUCTION SHEET FOR SET #8.1101

Read this instruction sheet thoroughly before initiating any work!  
2003 TOYOTA MATRIX MOTOR MOUNT INSERTS!

**ENERGY**  
**SUSPENSION** 


*It is recommended that if you are unfamiliar with this type of work that you refer to a qualified service center specializing in this type of work. It is also recommended that if you choose to do this work yourself that a factory service manual be obtained for the proper procedures pertaining to removal, replacement and proper torque specifications for your vehicle. This instruction set is intended as a guideline for the safe installation of Energy Suspension's Polyurethane.*

## STEP 1

Inspect engine torque mount for excessive wear and cracking. **If** the mount is severely damaged, ENERGY SUSPENSION recommends replacing with a new engine torque mount. Clean any dirt, grease, and excess rubber flashing that may be present inside the engine torque mount. **NOTE: IT IS VERY IMPORTANT THAT THE INSIDE OF THE TORQUE MOUNT BE CLEAN AND FREE OF FLASH.**

## STEP 2

Install the polyurethane inserts into the torque mount. One insert will be installed on each side of the torque mount. If supplied in set, use the nylon retainers. Note: The square head of nylon tie may need to be trimmed to seat flush against insert. Refer to illustration for proper orientation of parts. Reassemble torque mount into engine compartment.

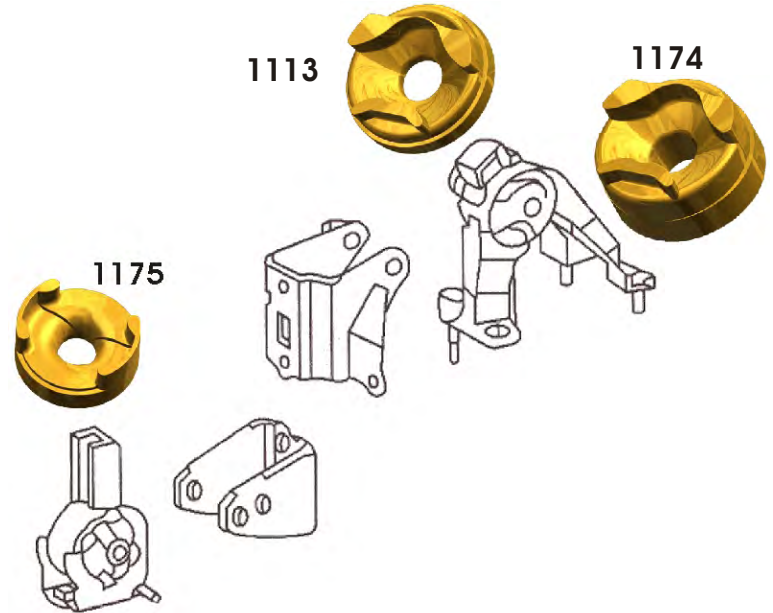

110503 