

**Product Number: JK3001 Application: 07-16** 

#### Your safety and the safety of others is very important.

- In order to help you make informed decisions about safety, we have provided installation instructions and other information.
- These instructions alert you to potential hazards that could hurt you or others.
- Please do a job safety analysis (JSA) before each task to identify potential hazards for your situation and remove/protect against them.
- You must use your own good judgment, and take your time.

Read and understand all safety precautions and instructions before installing this product.

THIS PRODUCT IS FOR OFFROAD USE ONLY. ALL LIABILITY FOR INSTALLATION AND USE RESTS WITH THE OWNER.

CARELESS INSTALLATION AND OPERATION CAN RESULT IN SERIOUS INJURY OR EQUIPMENT DAMAGE.

SENSORS FIELD OF VIEW WILL BE ALTERED WITH USE OF THE REPLACEMENT BUMPER.

### Injury hazard

#### **Failu**

are to observe these instructions could lead to severe injury or death.	
	Always remove jewelry and wear eye protection.  Always use extreme caution when jacking up a vehicle for work. Set emergency brake and use tire blocks. Locate and use the vehicle manufacturers designated
	lifting points. Use jack stands.  Always use appropriate and adequate care in lifting components into place.  Always insure components will remain secure during installation and operation  Always wear safety glasses when installing this kit. A drilling operation will  cause flying metal chips. Flying chips can cause serious eye injury.
	<b>Always</b> use extreme caution when cutting and trimming during fitting. <b>Always</b> tighten all nuts and bolts securely per installation instructions. <b>Always</b> route electrical cables carefully. Avoid moving parts, components that
	become hot and rough or sharp edges. <b>Always</b> insulate and protect all exposed wiring and electrical terminals. <b>Always</b> perform regular inspections and maintenance on mounts and related hardware.



Product Number: JK3001 Application: 07-16

#### I. Overview

Congratulations on your purchase of the industries' best and most stylish JK Mirror Guard! These Mirror Guards have been **engineered** for strength while keeping the weight down.

Your JK Mirror Guards were designed in 3-D, fabricated, and powder coated... all in the U.S.A.

Enjoy the fit and finish of quality JK Mirror Guards from Fab Fours Inc!




Product Number: JK3001 Application: 07-16

#### II. Vehicle Preparation

### NOTE: Anti-seize is recommended on all stainless hardware.

- 1. First remove door from vehicle and place door on soft foam or blanket to keep from damaging the interior.
- 2. Next remove the top four bolts holding the skin to the door.

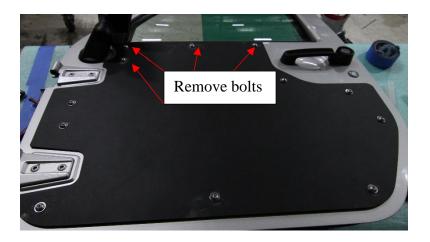

3. Once bolts are removed, use the provided hardware to install the mirror guard reusing the existing top four mounting locations of the skin. Using the provided hex head bolt in the location closest to the door handle.






Product Number: JK3001 Application: 07-16

4. Once all bolts are loosely installed, position mirror guard to desired position and tighten all hardware.

#### III. Maintenance/Care

- ☐ Periodically check and tighten all fasteners.
- ☐ Stripped, fractured, or bent bolts or nuts need to be replaced.
- ☐ Keep all surfaces free of dirt, road grime, and standing water to ensure finish longevity.

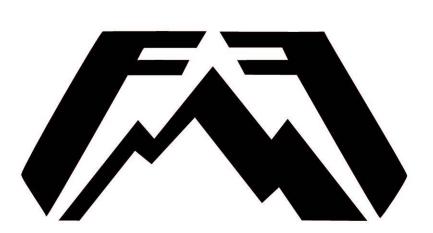

More than expected... Better than expected

View other off-road bumpers made by Fab Fours on our website.