



FABSPEED
M O T O R S P O R T

Maserati Gran Turismo Resonator Bypass X-Pipe

SKU: FS.MAS.GT.XP



Required Tools


*Commercial Lift (or Hydraulic Floor Jack & Stands)
Socket Driver or Impact Wrench
Swiveling Socket Adaptor
10mm, 13mm, 15mm, & 18mm Sockets
4mm Allen/Hex Wrench
Liquid Wrench / Penetrant Spray (Optional)
Rubber Mallet (Optional)
Small Flashlight (Optional)*

CAUTION


- *Always allow car to cool before performing any installation(s) or service(s) on it.*
- *Always be sure to work on an even and level surface when raising vehicle(s) with a jack, and support all raised vehicles with locked jack stands once elevated.*
- *Fabspeed Motorsport recommends that all installations be supervised or verified by a trained professional technician.*
- *Fabspeed Motorsport is not responsible for any personal injury or damage(s) sustained to a vehicle during installation of aftermarket performance parts.*

INSTALL
GUIDE

1. Raise car and remove under panel by removing (26) 13mm bolts, (18) 10mm bolts, (2) 18mm bolts, & (1) 4mm hex screw

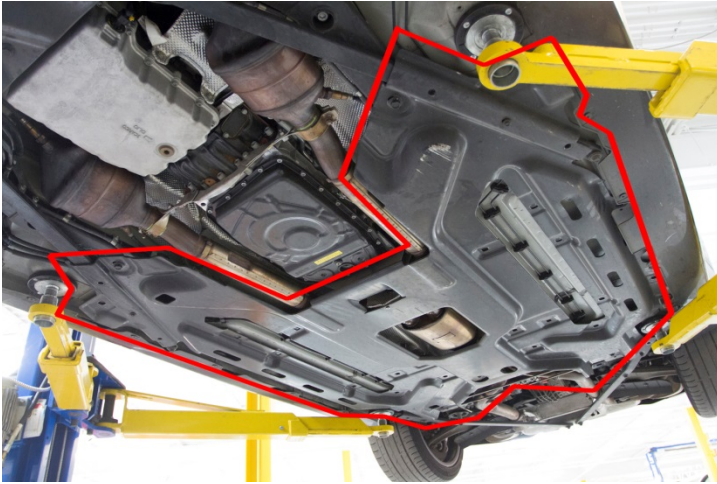

2. Spray penetrant solution on any exhaust joints that may need it and allow to soak for 10-15 min.

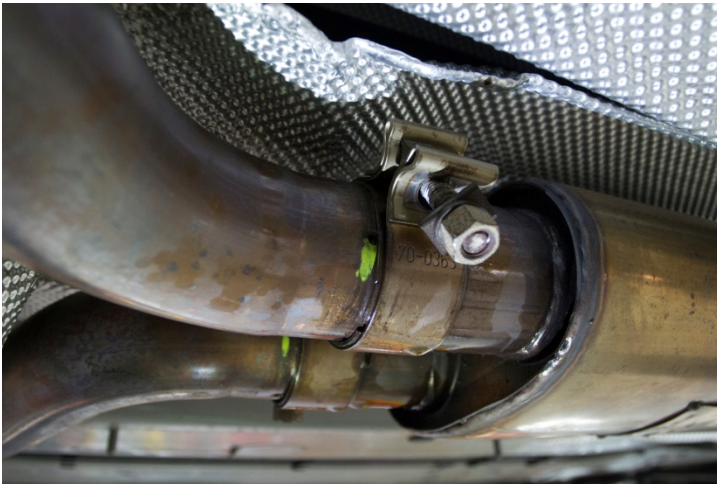

3. Loosen rear exhaust joint clamps aft of the factory resonator.



4. Loosen front exhaust joint clamps in front of the factory resonator.




5. Separate exhaust sections at the rear joint. *(NOTE: A rubber mallet may be needed to tap the sections apart)*




6. Separate the front joint of the resonator section and remove the factory resonator.



7. Slip Fabspeed X-Pipe over the front factory tubing.

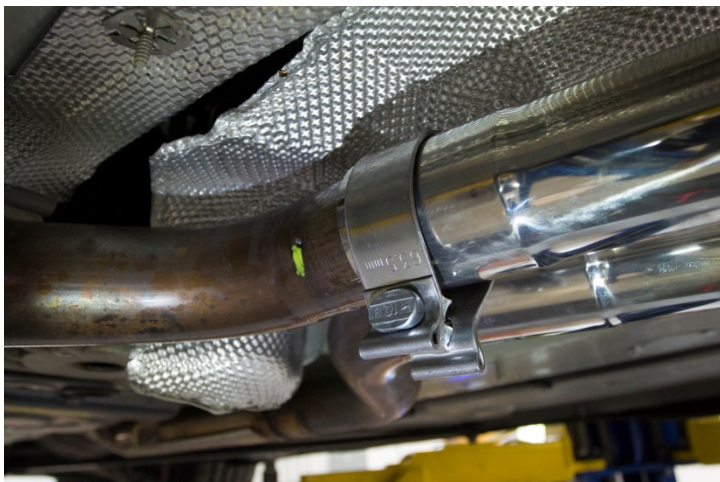

8. Align and slip Fabspeed X-Pipe onto rear factory tubing.

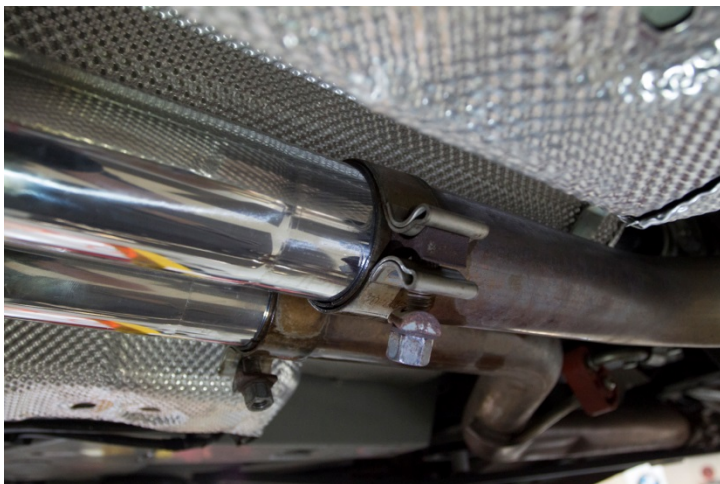

9. Tighten front clamps.



10. Tighten rear clamps.



11. Check all fittings and clamps and re-install under panel.
12. Enjoy and show off your new Fabspeed Motorsport exhaust system!

