



Porsche 986 Maxflo Performance Exhaust System

SKU: FS.POR.986.MAX



Required Tools

*Hydraulic Lift or Floor Jack & Stands
Metric Socket Set w/ Ratchet & Extensions
Metric Open-End Wrench Set
Torx Bits & Driver
Small Flashlight (Optional)
Rubber Mallet (Optional)
Flat-Head Pry Bar (Optional)*

CAUTION

- Always allow car to cool before performing any installation(s) or service(s) on it.
- Always be sure to work on an even and level surface when raising vehicle(s) with a jack, and support all raised vehicles with locked jack stands once elevated.
- Fabspeed Motorsport recommends that all installations be supervised or verified by a trained professional technician.
- Fabspeed Motorsport is not responsible for any personal injury or damage(s) sustained to a vehicle during installation of aftermarket performance parts.

INSTALL GUIDE

- 1) Lift car and remove rear wheels.



- 2) Spray all necessary OEM hardware and exhaust connections with rust penetrant.
- 3) Remove (2) 13mm nuts from secondary cat mounting bracket on both sides of the vehicle.



- 4) Loosen (2) 13mm sleeve clamps on both sides and slide the clamps out of the way.



- 5) Support muffler as a safety precaution while unbolting it from the rear of the vehicle.

INSTALL GUIDE


- 6) Remove (2) 13mm bolts from the lower center muffler mounting bracket.



- 7) Remove (2) 13mm nuts from upper center muffler mounting bracket located in the center of the vehicle above the transmission. See photo in step 13 for bolt location. *NOTE: Keep these bolts for reinstallation.*



- 8) Lower and remove factory muffler from the vehicle.

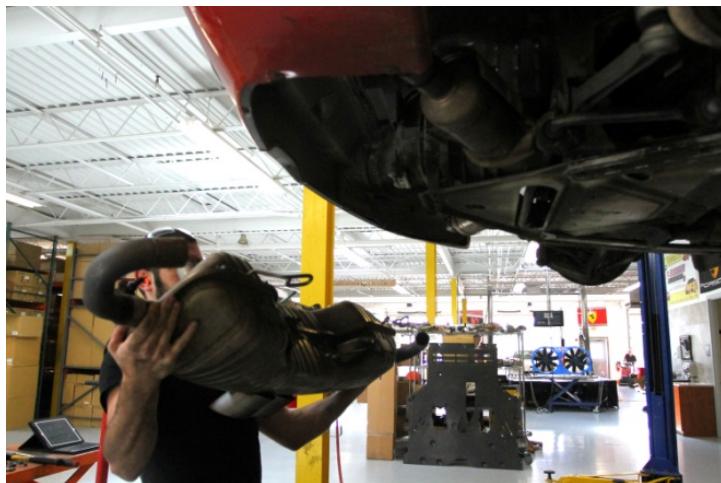


INSTALL GUIDE

- 9) Remove (3) 13mm nuts and bolts from the flange connecting the inlet pipe to the header.



- 10) Remove secondary catalytic converters from the vehicle.

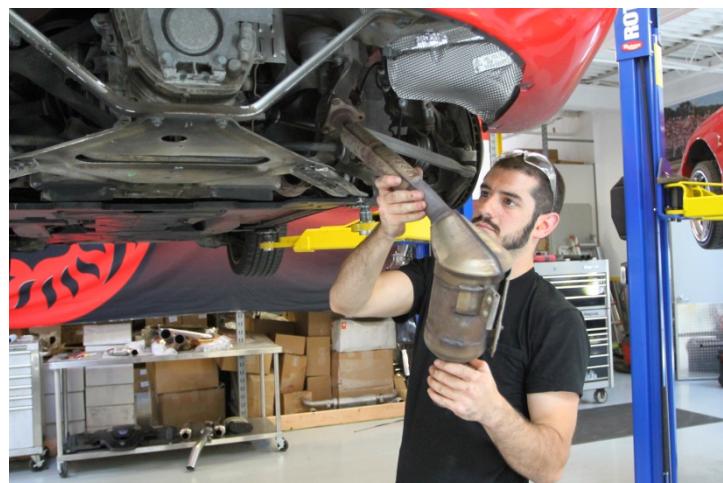

- 11) Remove (2) 6mm Allen fasteners securing the upper muffler mounting bracket to the factory muffler.



INSTALL GUIDE


- 12) Attach provided muffler support bracket to factory upper muffler mounting bracket using 13mm bolt and 6mm Allen fasteners.



- 13) Re-attach upper center mounting bracket with Fabspeed mounting bracket attached, using the 13mm factory bolts that were removed in step 7.



- 14) Identify left and right inlet pipes and position in vehicle.

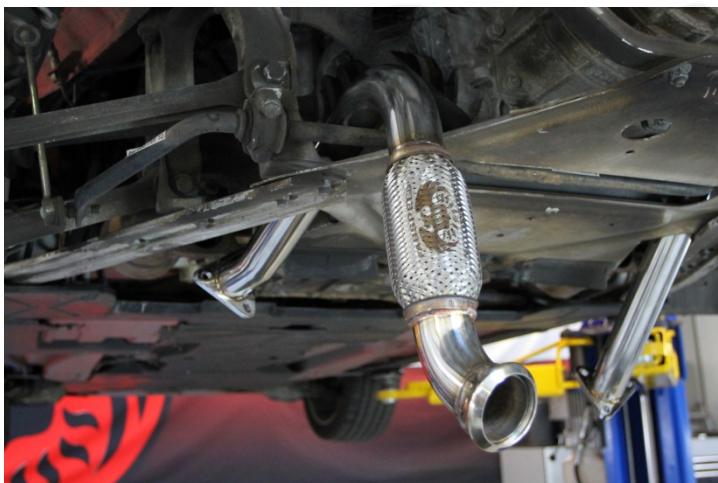

INSTALL GUIDE


- 15) Using supplied hardware, insert (3) 13mm bolts with washers and attach to header flange. *NOTE: Do not tighten at this stage.*
- 16) Connect left and right Maxflo mufflers together using the provided 15mm Accu-seal clamp.



- 17) Insert the provided muffler band straps through the Fabspeed mounting bracket.
- 18) Lift Maxflo system into rear of vehicle and attach band straps.



- 19) Line up connection between Maxflo mufflers and inlet pipes and attach with the provided v-bands clamps.

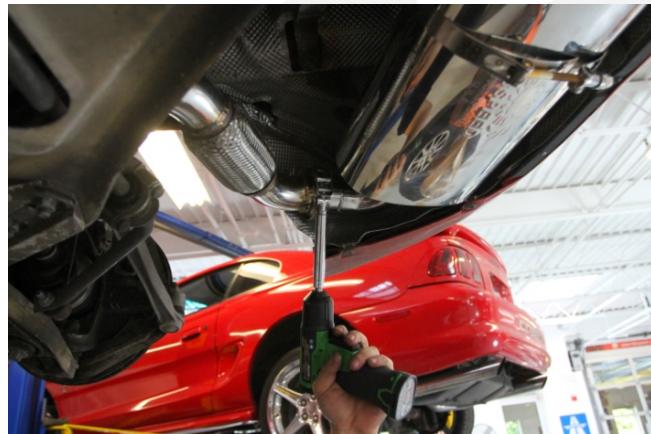

INSTALL GUIDE

- 20) Tighten all necessary hardware: flange bolts connecting inlet pipes to header, v-bands connecting inlet pipes to mufflers, and the Accu-seal clamp connecting right and left mufflers together.
- 21) Lower car and align the tips so that they are even and to your liking. Tighten the 13mm bolt on the back of each tip to secure them into position.



- 22) Re-install wheels and enjoy your new Fabspeed performance exhaust!



Check out an excellent selection of performance exhaust systems on our website.