



FTS94043 Sway Bar Clamp Kit

Parts List

Qua	Part #	Description
2	FT50248	1 3/16" Shaft Collar Frt. Sway Bar
1	FTLock	Thread Locking Compound
2	FT94043I	Instructions Sheet

Tool List: (Not Included)



Assorted Metric and S.A.E Sockets & Allen Wrenches

READ ALL INSTRUCTIONS THOROUGHLY FROM START TO FINISH BEFORE BEGINNING INSTALLATION!

THIS KIT IS DESIGNED TO WORK WITH THE FACTORY SWAY BAR OR A BAR WITH A 1 3/16" BAR DIAMETER.

INSTRUCTIONS:

1. Disconnect the negative terminal on the battery.
Remove the plastic cover that is over sway bar and save with the hardware. Locate FT50248 Sway Bar Clamps and supplied thread locking compound. Place around the sway bar on the inside of the factory mounting brackets. Tighten the screws evenly until the inside of the clamp is flush with the sway bar. Torque the screws to 10 ft. lbs. SEE PHOTOS BELOW

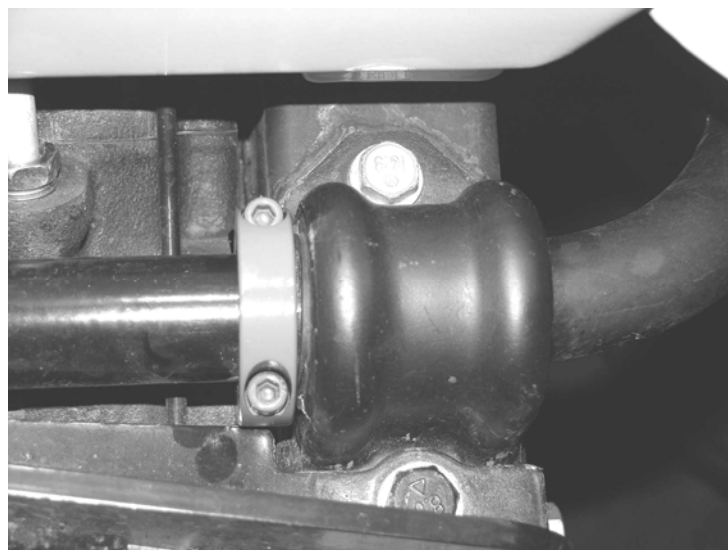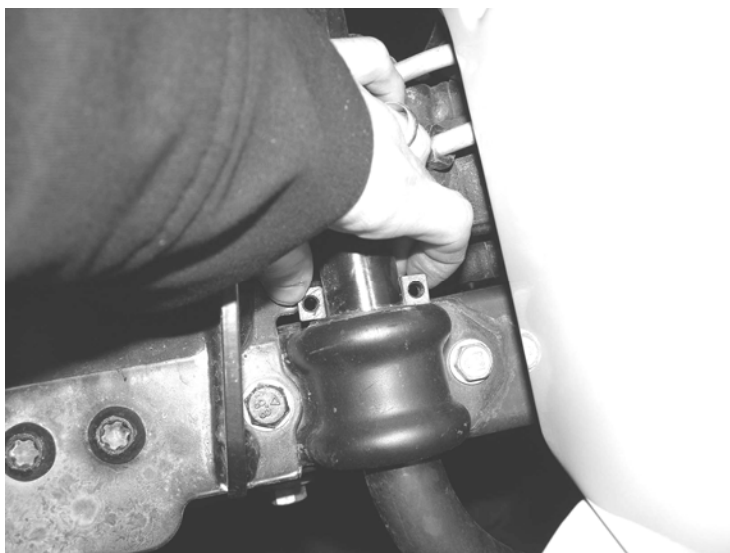

2. Re-install the plastic cover.