


INFO

febi
103099

SWAG
20 10 3099

to fit:
BMW
N51 + N52 engines

Repl. No.
11 12 7 552 281

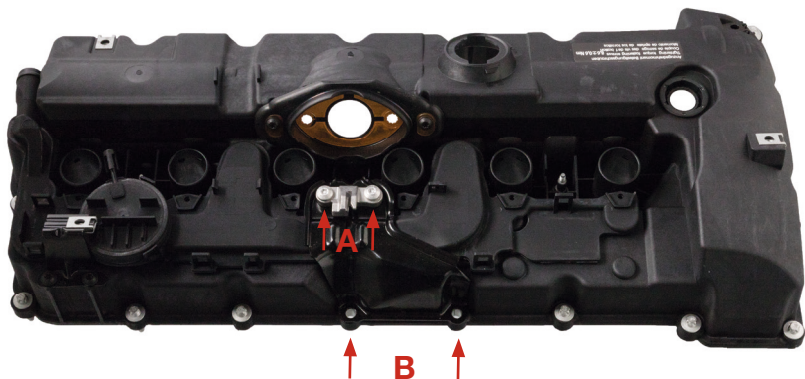

EN Attention: Loosen the two bolts of holder A before tightening the valve cover.

Note: Only when the two bolts (B) have been tightened to the manufacturer's specified torque of 9Nm can the two bolts of holder A be tightened again with a torque of 5Nm.