


# Mini-Kit PL259 Installation Guide

Compliments of Firestik® Antenna Company Technical Support Team

Copyright © 2007 Firestik® Antenna Company

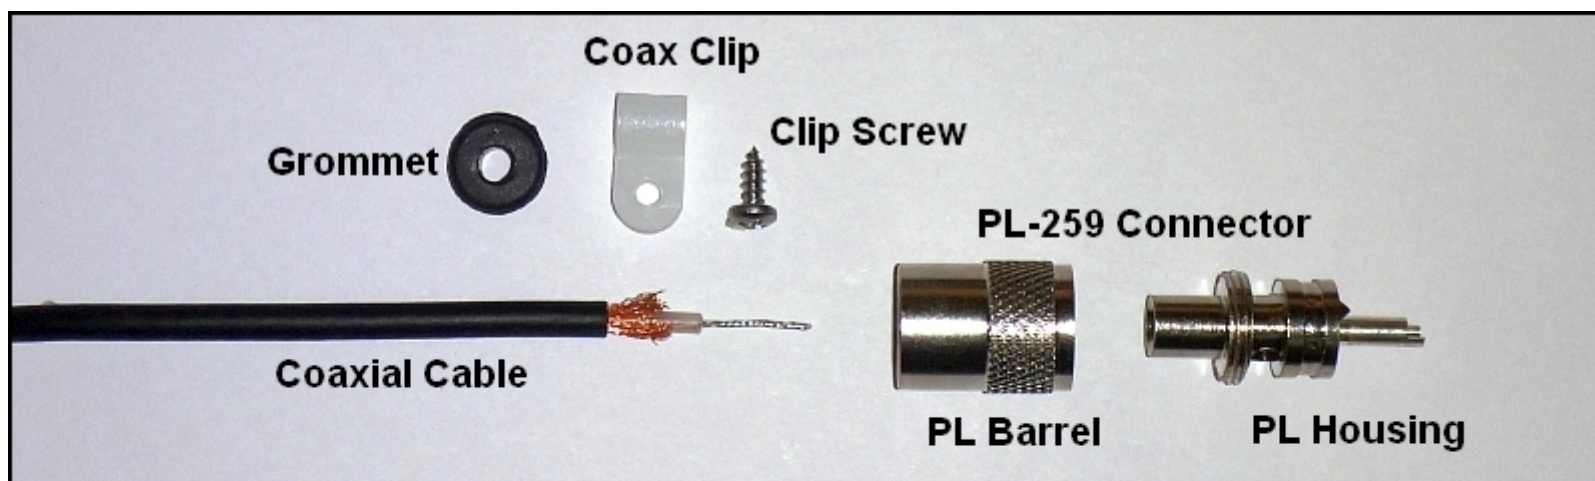

1. If coax is to pass thru a drilled hole, install grommet on coax first.



2. Unscrew PL barrel from bottom end of the PL-259 and slip it over the cable.




3. With copper braid folded back over coax, thread the PL housing unto the coax



4. Thread PL barrel back unto PL housing



Provided clip and screw can be used to secure the cable to avoid wear.

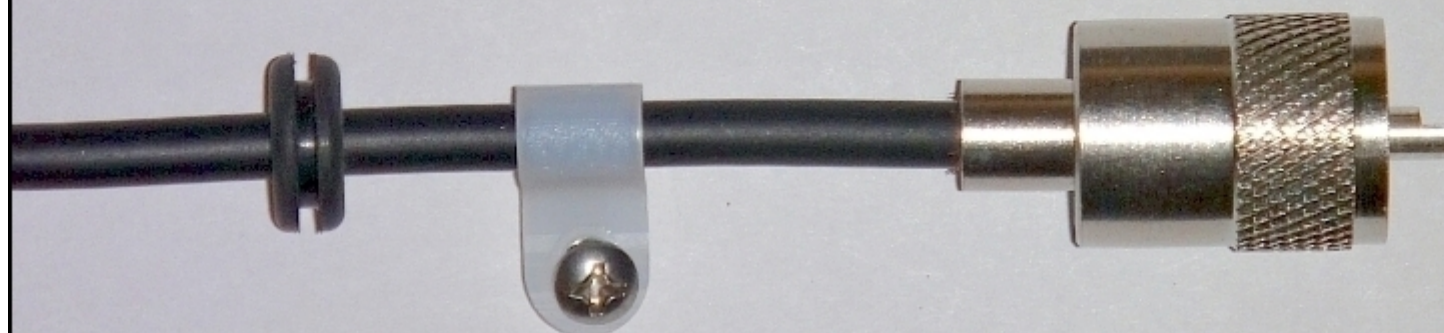



# FireRing Stud Mount Installation

Compliments of FireStik® Antenna Company Technical Support Team

Copyright © 2007 FireStik® Antenna Company

