



INSTALLATION INSTRUCTIONS

PART No.

FB21276

**Universal
Spare Tire Jerrycan Mount**



REQUIRED TOOLS

- 13mm Socket
- 5mm Allen Key
- 4mm Allen Key
- Lug Nut Socket

Compatible Bolt Patterns:

- 4.5"x5"
- 5"x5"
- 5.5"x5"

KIT CONTAINS

- M8x50mm Button Head Bolt
- M8x25mm Button Head Bolt
- M8 Flat Washer
- M8 Flange Nut
- M6x20mm Button Head Bolt
- M6 Flat Washer
- M6 Flange Nut
- 3M Foam
- Jerrycan Cradle
- Ratchet Strap, 8ft.
- Cradle Rail
- Cradle Tire Mount

QTY

- 2
- 1
- 3
- 3
- 4
- 4
- 4
- 2
- 1
- 1
- 1
- 1

Universal Spare Tire Jerrycan Mount

1) ASSEMBLE

Begin assembling your mount starting with placing the cradle onto the cradle rail. Line up the bottom holes and secure the two with the included M6 bolts, washers, and nuts, with a 4mm hex wrench.




Next, remove the backing of the large adhesive foam and place it firmly into the bottom of the cradle.



2) SETUP

Remove the backing of the circular foam and apply it firmly to the cradle tire mount, so that the holes line up.

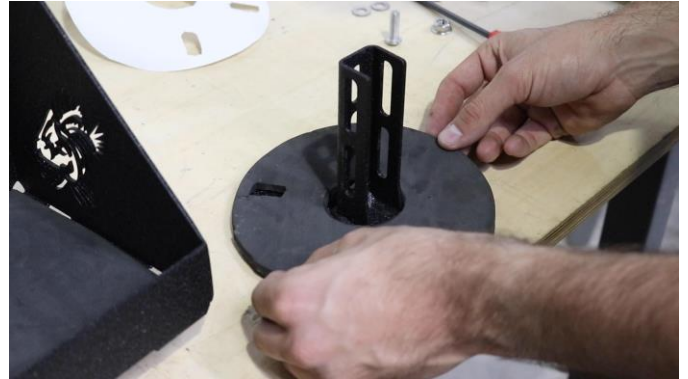

Next, remove your vehicle's spare tire and place the tire mount onto the carrier's studs, so that they rest evenly in one of the 3 smallest fitting holes.



Resecure your tire.

3) INSTALL

Place the cradle rail onto the mount rail. Adjust how far or close you would like the mount to sit, and secure it with the 3 remaining bolts, washers, and nuts with a 5mm hex wrench and 13mm socket. The two longer bolts will insert through the sides, with the shorter entering through the top.




INSTALLATION INSTRUCTIONS

PART No.

FB21276

**Universal
Spare Tire Jerrycan Mount**

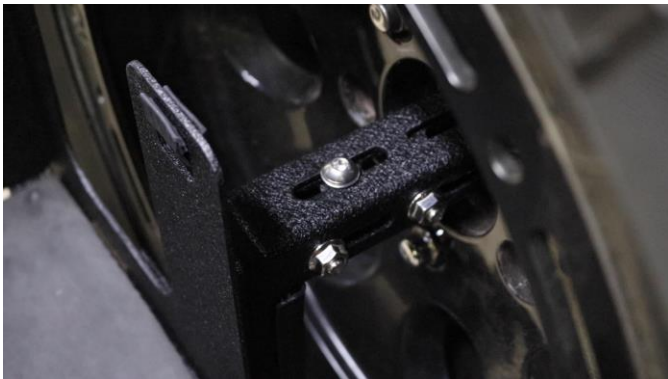

**ENJOY YOUR NEW FISHBONE OFFROAD SPARE TIRE
JERRYCAN MOUNT!**

Finally, insert your desired Jerrycan, and secure it with the included ratchet strap.



Discover other spare tire covers and carriers on our website.