

INSTALLATION INSTRUCTIONS

PART No.

FB21289

**Universal
Spare Tire Flag Mount**



REQUIRED TOOLS

Ratchet
(2) 13mm Sockets or
Wrenches

**If applicable for your
flag pole (Flag Pole not
included):**

Drill
¼" Drill Bit

KIT CONTAINS

M8 Hex Bolt
M8 Nyloc Nut
M8 Flat Washer
Lock Pin
3M Foam

Flag Mount Rail
Flag Tire Mount

QTY


2
2
4
1
1
1
1

Compatible Bolt Patterns:

4.5"x5"
5"x5"
5.5"x5"

1) **SETUP**

Remove the backing of the circular foam and apply it firmly to the flag tire mount, so that the holes line up.

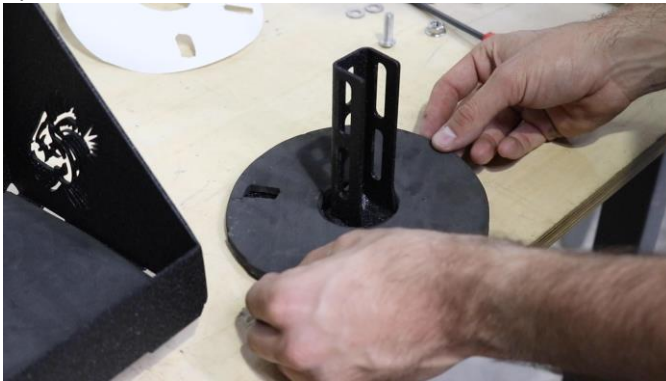

Next, remove your vehicle's spare tire and place the tire mount onto the carrier's studs, so that they rest evenly in one of the 3 smallest fitting holes.



Resecure your tire.

2) **INSTALL**


Place the flag rail onto the mount rail. Adjust how far or close you would like the mount to sit, and secure it with the 2 included hex bolts, washers, and nyloc nuts with (2) 13mm sockets or wrenches.



Finally, insert your desired flag pole into the mount and secure it with the included Lock Pin.



If your flag pole does not already have a locking pin hole, you will need to drill through your pole with a 1/4" Drill Bit.

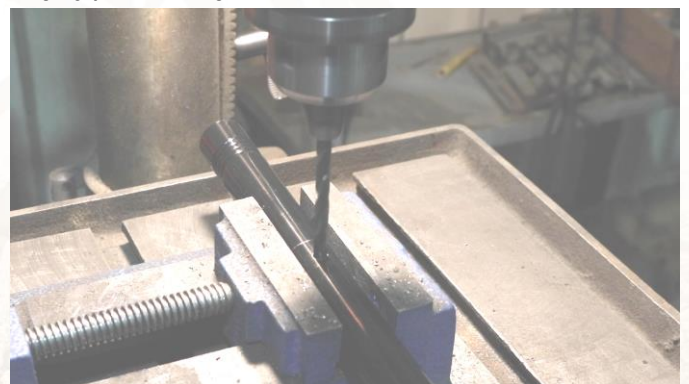

**ENJOY YOUR NEW FISHBONE OFFROAD SPARE TIRE
FLAG MOUNT!**