



INSTALLATION INSTRUCTIONS

PART No.

FB22149

**Jeep® JT Gladiator
Mako Rear Bumper**



REQUIRED TOOLS

- 18mm Socket
- 8mm Allen
- 4mm Allen

KIT CONTAINS

- JT Gladiator Mako Rear Bumper
- D-Rings
- M12 Hex Nut
- M12 Washer
- M12 Lock Washer
- M12 Counter Sunk Bolt
- M6 Button Head Bolts
- M6 Washers
- M6 Lock Washers

QTY

- 1
- 2
- 6
- 6
- 6
- 2
- 4
- 4
- 4

Jeep® JT Gladiator Mako Rear Bumper

1) REMOVE YOUR EXISTING BUMPER

Remove your existing rear bumper according to the manufacturer's instructions.



If your model has sensors, remove them in order, left to right, one through four.



2) PREP YOUR NEW BUMPER FOR INSTALL

With the Mako aside, re-install your trailer wiring plug and license plate lights into it.




If your model has sensors, pop out our included sensor plugs from the bumper, and re-install your sensors in order, and as they were oriented in the factory bumper.



Jeep® JT Gladiator Mako Rear Bumper

Remove the factory clip nuts from the JT's frame.

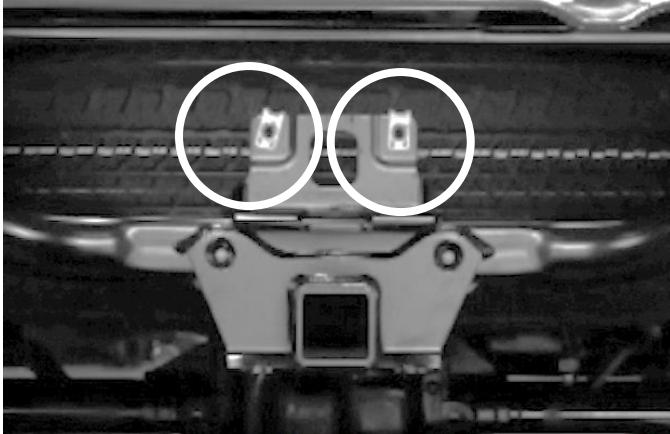

With the included tapered bolts, washers, lock washers, and nuts, secure the center of the bumper to the center frame mount.

4) **RECONNECT WIRES**

With your bumper in place, reconnect your trailer wiring, license plate lights wiring, and the sensor plugs harness.



3) **INSTALL YOUR BUMPER**

Slide the Mako into the frame mounting holes.



With the included flat washers, lock washers and hex nuts, secure the bumper to the left and right frame mounts with an 18mm Socket.





INSTALLATION INSTRUCTIONS

PART No.

FB22149

**Jeep® JT Gladiator
Mako Rear Bumper**

5) INSTALL YOUR LICENSE PLATE

With the included bolts, washers, and a 4mm Allen, secure your license plate to the center of the bumper.



6) INSTALL YOUR D-RINGS



7) ENJOY YOUR NEW FISHBONE OFFROAD BUMPER!