

FISHBONE  
OFFROAD



## INSTALLATION INSTRUCTIONS

**PART No.**

**FB25116**

**Jeep® 07' - 18' JK Wrangler  
Luggage Rack**



### REQUIRED TOOLS

6MM Allen  
17MM Socket

### KIT CONTAINS

Tub Rail Support Plate (Left & Right)  
Center Cross Plate  
M10 Bolt  
M10 Nyloc Nut  
M10 Flat Washer  
Hard Top Knobs

### QTY

1 ea  
1  
6  
6  
16  
4



#### 1) REMOVE YOUR HARD OR SOFT TOP

To make the installation easier, we recommend you remove or loosen your hard or soft top



It's not necessary, however.


#### 2) INSTALL THE SUPPORT PLATES

The orientation of the support plates can be determined by the location of the smaller, unbranded section.



As shown above, this section will always face the rear of the vehicle, and the tub rail holes will cover your vehicle's (2) most rear rail holes.

Secure them with (2) of the included Hardtop Knobs lead by a Flat Washer.

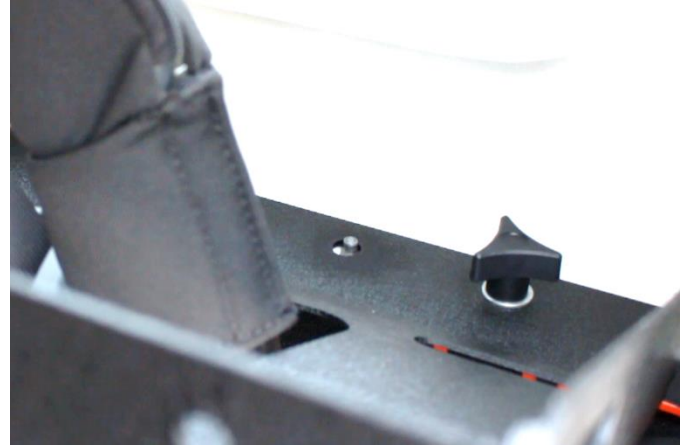

Repeat on the opposite side.

#### 3) INSTALL THE CENTER CROSS PLATE

With the Fishbone Offroad name plate facing the rear of the vehicle, raise the Cross Plate up and in between the two Support Plates.







## INSTALLATION INSTRUCTIONS

**PART No.**

**FB25116**

**Jeep® 07' - 18' JK Wrangler  
Luggage Rack**

Secure each side with (3) Bolts, (6) Flat Washers, and (3) Nyloc Nuts.

Tighten down the bolts with a 17MM Socket and a 6MM Allen wrench.



### 4) ENJOY YOUR NEW FISHBONE OFFROAD LUGGAGE RACK!

