




Part # TABT4016

1981-1987 Standard Cab GM C/K 10-30 Series Low Tunnel Truck Full Interior Sound Dampening Kit

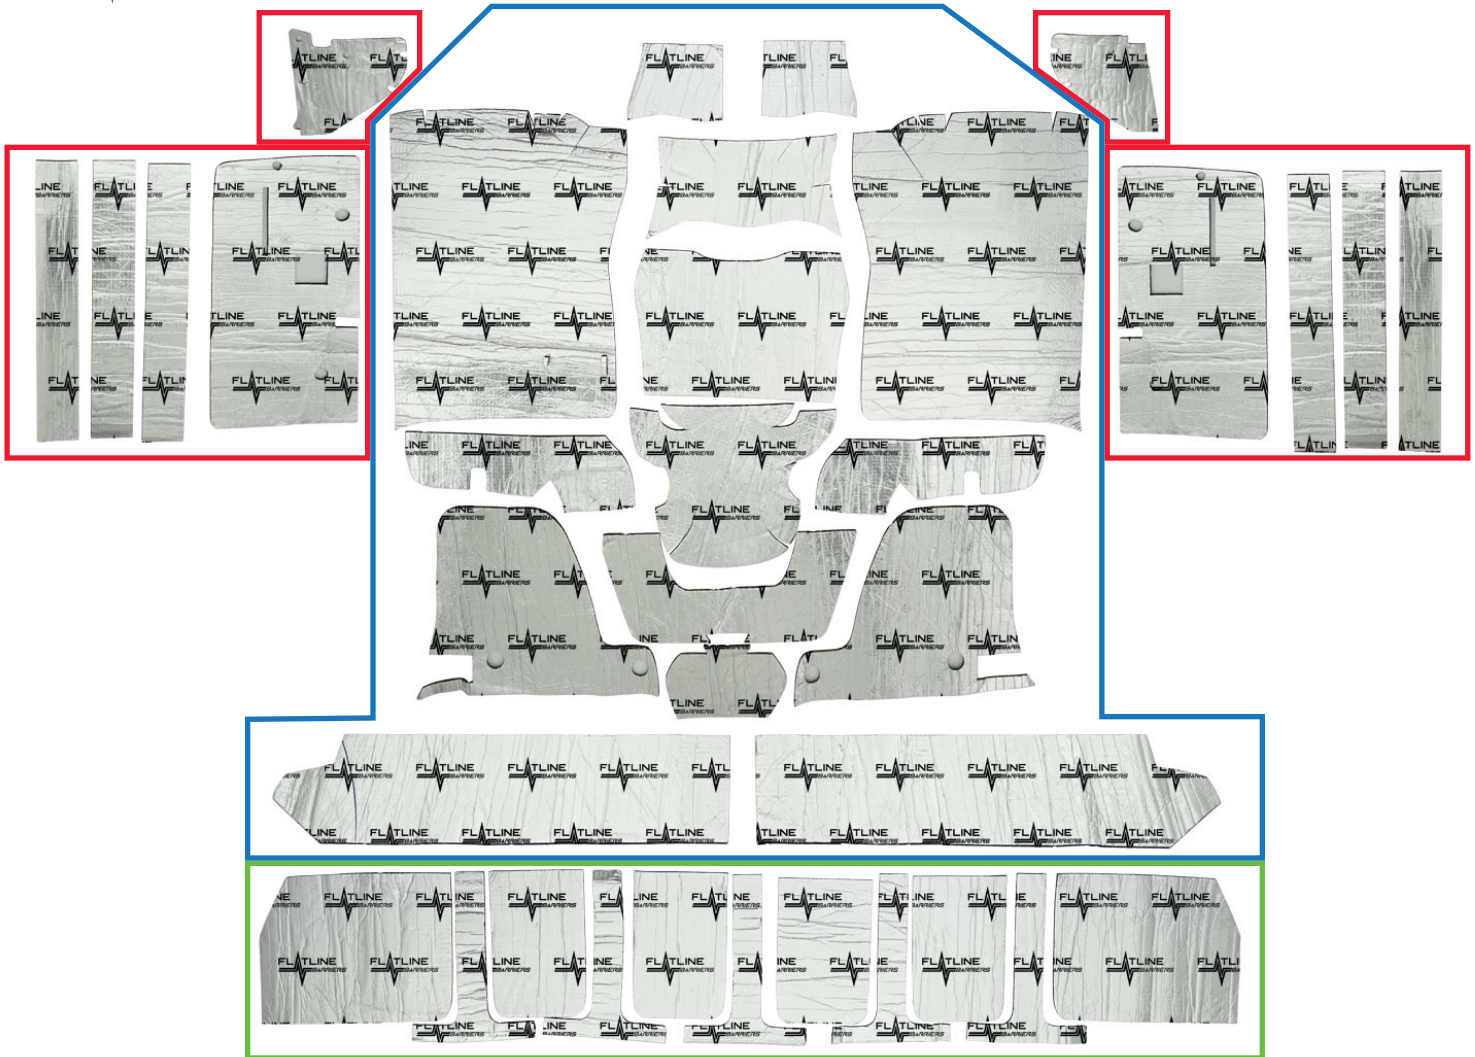

TABT4010 - 1981-1987 Standard Cab GM C/K 10-30 Series Low Tunnel Truck Floor Insulation & Sound Dampening Kit

TABT4008 - 1973-1987 Standard Cab GM C/K 10-30 Series Truck Cab Wall Insulation and Sound Dampening Kit

TABT4007 - 1973-1987 GM C/K 10-30 Series Truck Front Door Insulation and Sound Dampening Kit

Installation Directions:

1. Clean any dirt, debris, or grime from the intended installation area using a degreasing agent.
2. Allow intended installation area adequate time to dry.
3. Remove the kit from its packaging, and dry fit the components allowing you to see exactly how the product will be placed for final installation.
4. Now you are ready to install. Remove the protective layer exposing the adhesive on your first piece applying it to its final position, using light pressure.
5. Repeat step 4 for each individual component until the full kit is installed.