




53622FLT - 2 1/2" UNIVERSAL CROSSPIPE
53623FLT - 3" UNIVERSAL CROSSPIPE
53630FLT - 2 1/2" UNIVERSAL CROSSPIPE w/ cutouts
53631FLT - 3" UNIVERSAL CROSSPIPE w/ cutouts

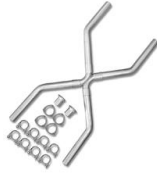

53622FLT shown



53630FLT shown

NOTE: IT IS THE INTENT AND DESIRE OF THE MANUFACTURER THAT THIS PRODUCT BE USED IN COMPLIANCE OF ALL LOCAL, STATE, AND FEDERAL EMISSIONS LAWS AND REQUIREMENTS. Please refer to the Limitation of Liability.


As a result of restricted room available in some engine compartments, you may experience a close fit to some body and chassis components. This is a normal condition. If this is the first time installing a set of headers, it may be timing consuming. While not complex, stick with it. As soon as you start your engine, the reward of the additional horsepower and performance will be well worth your efforts. Proper installation and periodic maintenance will result in the maximum performance and life of your **FLOWTECH™** headers.

READ THESE INSTRUCTIONS CAREFULLY BEFORE STARTING:

For the ease of installation, your vehicle must be raised a minimum of 24".

WARNING: Should you decide to install any exhaust product yourself, be warned that the original equipment jack that came with the vehicle is intended for emergency use only. The use of a frame jack, in conjunction with a floor jack, as the main support is highly recommended to minimize the accidental dropping of a vehicle while the installation proceeds. Never go under a vehicle that is supported by only a bumper jack!

NOTE: Some cutting and welding tools will be required for this installation.

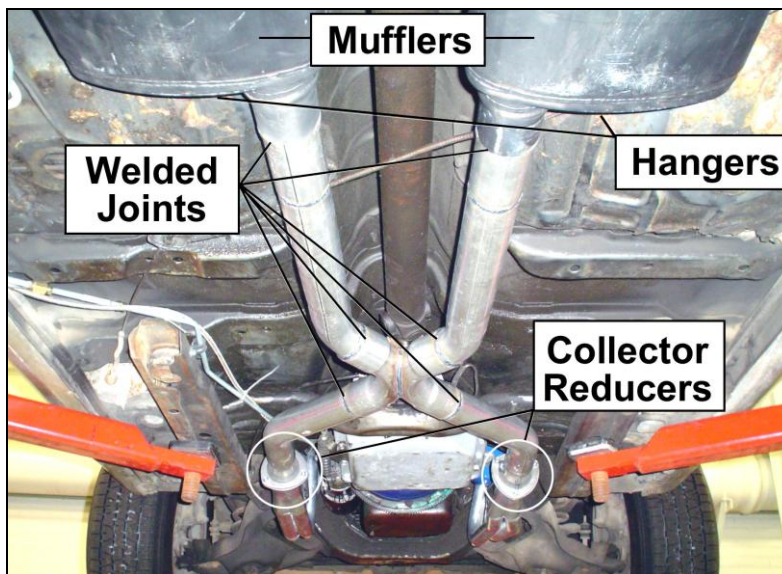

Flowtech® recommends that all joints be welded for support and a leakproof installation.

Learn more about performance exhaust systems we have.