

Installation Instructions

Nissan Armada 2017- up



PARTS LIST

Hood protector



Mounting Clips (7)



Pins (7)



Screws (7)



Anti-abrasion pads- large (7)



Metal "L" brackets (7)



Bumpons (6)



"D" Gasket



Surface cleaner (1)



INSTALLATION

- Ensure the vehicle is clean and completely dry before installation.
- Use of the correct screwdriver will facilitate a trouble free installation. Do not attempt to use #1 or smaller Phillips screwdriver or any type of powered screwdriver.

CARE

Hand clean the protector using a mild soap and water solution or plastic cleaner only. Avoid automatic car-wash equipment where a brush and/or soft cloth come in contact with the hood protector. Touch-less style automatic car-wash equipment is less likely to harm the air protector.

SERVICE

Periodically check to confirm the protector is securely attached to the hood.

WARNINGS


Do not pull / push on the protector when opening / closing the hood.

TOOLS AND SUPPLIES REQUIRED


Phillips screwdriver #2

Tape measure

Clean cloth or paper towel

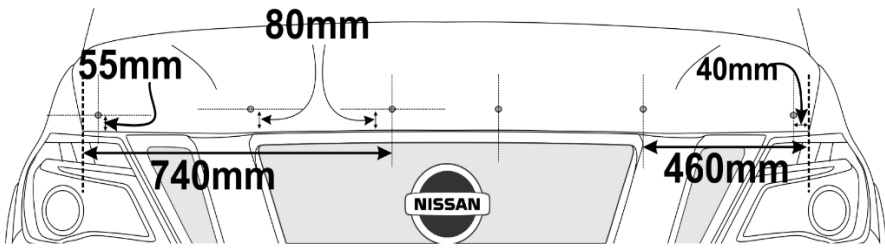


1. Install six (6) bumpons as shown in the diagram below.
****Bumpons must be installed on the hood. If they are installed on the hood protector they will wear through the paint on the hood****

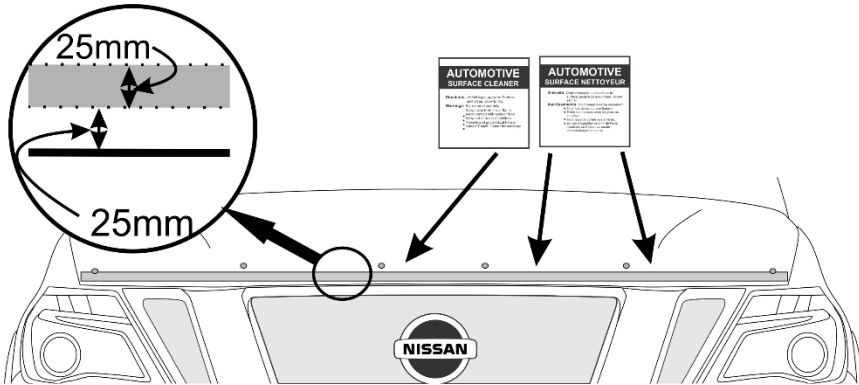


2. Clean the area indicated in the illustration.


3. Center the "D" gasket laterally on the hood. The "D" gasket installs approximately 1" up from the hood edge. Once its position has been established, peel a small length of the protective backing and place the gasket in position on the hood. Do not peel the full length of backing off! The adhesive is very sticky and once it sticks to something it is very difficult to remove. Peel 3 or 4 inches at a time and press down as you peel.

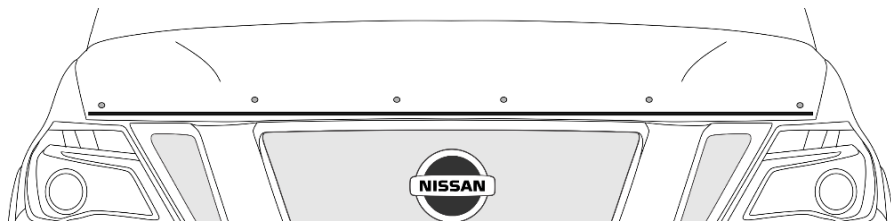


4. Center protector on hood and set on bumpons. This will enable you to determine where the abrasion pads need to be placed.

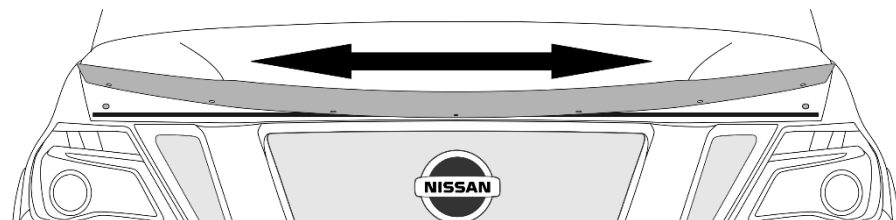


5. Peel and fold three (3) abrasion pads in half over the hood edge aligned with the three centermost holes in the protector above the grill.

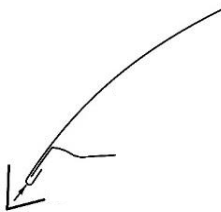

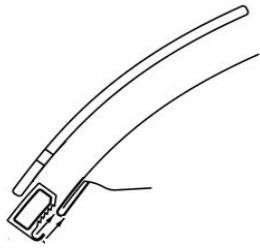


6. Place a clip body over each of the three abrasion pads on the edge of the hood.

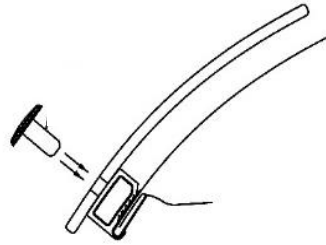


7. Insert a pin through the protector into each of the three clip bodies.

8. Insert a screw through an 'L' bracket and into each of the three clip bodies.

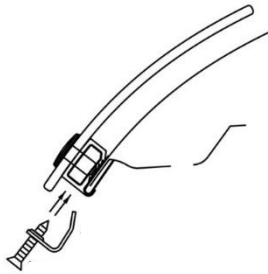

9. Ensure all the components are well seated together. Do a final check to ensure the protector is centered on the hood, and then tighten the screws into the clip bodies.

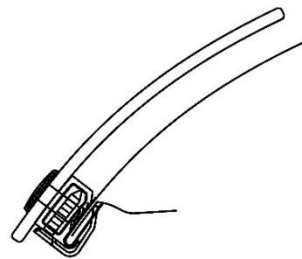

10. Repeat steps 3 to 7 with the remaining 4 abrasion pads and clip assemblies.

NOTE

On some vehicles it may be necessary to adjust the hood bumpers and/or latch for proper clearance.

CARE

Hand clean the protector using a mild soap and water solution or plastic cleaner only.

Avoid automatic car-wash equipment where a brush and/or soft cloth come in contact with the hood protector. Touchless style automatic car-wash equipment is less likely to harm the hood protector.

WARNINGS

Do not pull/push on the deflector when opening/ closing the hood.

SERVICE

Periodically check to confirm the protector is securely attached to the hood and the Bumpons are in place.