

Installation Bulletin:

CF11667


05-13

Estimated time of installation:



10 minutes or less

Application: Chevrolet Camaro


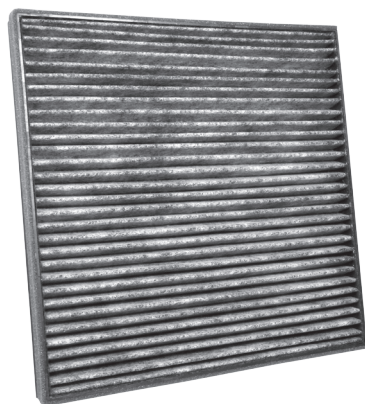


TOOLS: Unknown or not required

LOCATION OF CABIN FILTER: Under the hood, in front of the windshield, under the cabin filter cover on the passenger side of the vehicle.

REMOVE ALL DEBRIS IN AND AROUND FILTER LOCATION.

1. Open the hood and remove the passenger side cowling.
2. Release the retainer on the passenger compartment service lid.
3. Open the service lid.
4. Remove the dirty filter.
5. Install the clean filter.
6. Close the passenger compartment service lid and secure the retainer.
7. Reinstall the passenger side cowling and close the hood.

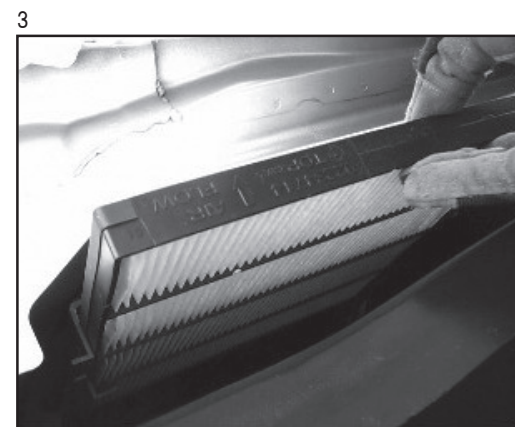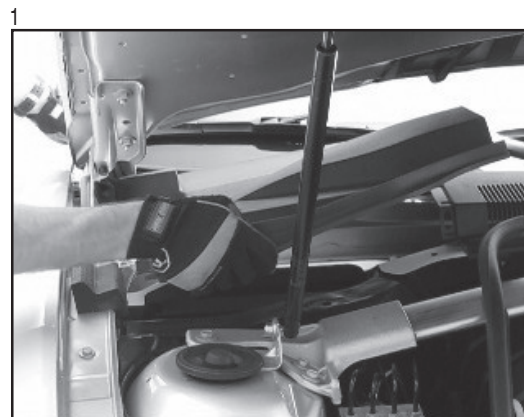

Shop for quality Fram products on our website.

Learn more about OEM engine and components we have.