


**07-13 Chevrolet 1500 Diamond Back Bumper Bolt Bag. No Lights Part # 100-20-7008, With Lights Part # 100-20-7009**

**07-10 Chevrolet 2500HD, 3500HD Diamond Back Bumper Bolt Bag. No Lights Part # 100-20-7010, With Lights Part # 100-20-7011, With Sensors Part# 100-20-7012, With Sensors & Lights Part# 100-20-7013**

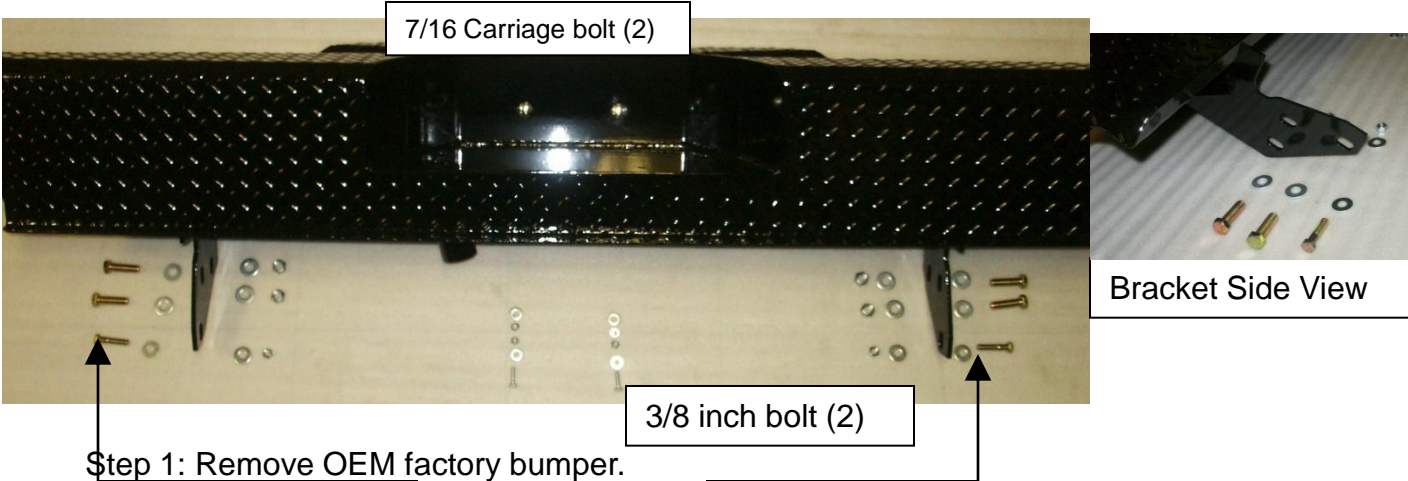

Step 1: Remove OEM factory bumper.

Step 2: Align Frontier bumper to inside of frame. (Note: During installation, guide OEM spare tire tube into the spare tire tube on Frontier bumper.) Install bolts from the inside of frame through the bracket and the frame using 3/8" and 1/2" bolts and washers. The 3/8" bolts are installed on the end of the bracket as highlighted in the picture.

Step 3: Attach original OEM factory receiver (that came on the vehicle) to the bottom of the drop using 7/16 carriage bolts, nuts and washers.

Step 4: If an impact is used, drive the bolt and hold the nut. To verify that the bolts are tight, check with a wrench by hand.

**Note:** Periodically check bolts to ensure that bolts remain tight. Also, before using with a trailer, check bolts to ensure that bolts are tight.

**IF FACTORY SENSORS ARE BEING INSTALLED YOU MUST BE EXTREMELY CAREFULL NOT TO BREAK THE INTERIOR WIRES IN THE SENSORS!!**

Bolt Bag Contents	
Quantity	Description
2	3/8" X 1-3/4 bolt
4	3/8" flat washer
2	3/8" Lock Washers
2	3/8" Hex nuts
4	1/2" X 1-3/4" bolts
8	1/2" flat washers
4	1/2" Lock Washers
4	1/2" Hex nuts
2	1/4" X 1" bolts (license plate)
2	1/4" hex nuts (license plate)
4	1/4" flat washers (license plate)
2	1/4" lock washers (license plate)
2	7/16 carriage bolts
2	7/16 Hex nuts
2	7/16 flat washers
46	Total Pieces