


07-13 Chevrolet 1500 Diamond Back Bumper Bolt Bag. No Lights Part # 100-20-7008, With Lights Part # 100-20-7009

07-10 Chevrolet 2500HD, 3500HD Diamond Back Bumper Bolt Bag. No Lights Part # 100-20-7010, With Lights Part # 100-20-7011, With Sensors Part# 100-20-7012, With Sensors & Lights Part# 100-20-7013

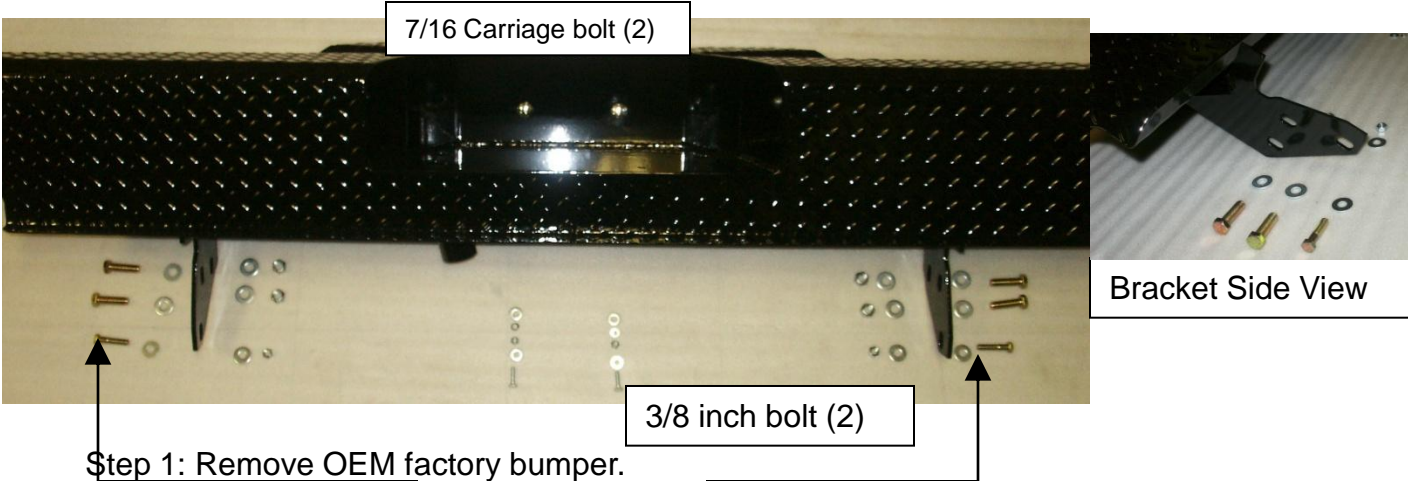

Step 1: Remove OEM factory bumper.

Step 2: Align Frontier bumper to inside of frame. (Note: During installation, guide OEM spare tire tube into the spare tire tube on Frontier bumper.) Install bolts from the inside of frame through the bracket and the frame using 3/8" and 1/2" bolts and washers. The 3/8" bolts are installed on the end of the bracket as highlighted in the picture.

Step 3: Attach original OEM factory receiver (that came on the vehicle) to the bottom of the drop using 7/16 carriage bolts, nuts and washers.

Step 4: If an impact is used, drive the bolt and hold the nut. To verify that the bolts are tight, check with a wrench by hand.

Note: Periodically check bolts to ensure that bolts remain tight. Also, before using with a trailer, check bolts to ensure that bolts are tight.

IF FACTORY SENSORS ARE BEING INSTALLED YOU MUST BE EXTREMELY CAREFULL NOT TO BREAK THE INTERIOR WIRES IN THE SENSORS!!

| Bolt Bag Contents | |
|-------------------|-----------------------------------|
| Quantity | Description |
| 2 | 3/8" X 1-3/4 bolt |
| 4 | 3/8" flat washer |
| 2 | 3/8" Lock Washers |
| 2 | 3/8" Hex nuts |
| 4 | 1/2" X 1-3/4" bolts |
| 8 | 1/2" flat washers |
| 4 | 1/2" Lock Washers |
| 4 | 1/2" Hex nuts |
| 2 | 1/4" X 1" bolts (license plate) |
| 2 | 1/4" hex nuts (license plate) |
| 4 | 1/4" flat washers (license plate) |
| 2 | 1/4" lock washers (license plate) |
| 2 | 7/16 carriage bolts |
| 2 | 7/16 Hex nuts |
| 2 | 7/16 flat washers |
| 46 | Total Pieces |