



**11-14 Ford F250-F450 Pro Series FBR
Installation Instructions.
Part # 130-11-1005**

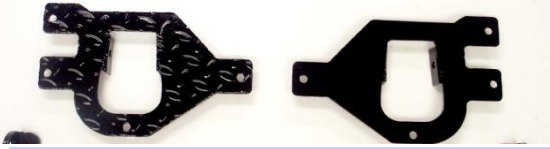

Factory Fog Light Brackets

Bolt Bag Contents:	
Quantity	Description
16	1/2" Flat Washers
8	1/2" X 2 1/4" Bolts
8	1/2" Hex Nuts
8	1/2" Lock Washers
8	1/4" Lock washers
16	1/4" flat washers
8	1/4" Lock nut
8	1/4" X 1" hex bolts
80	Total Pieces

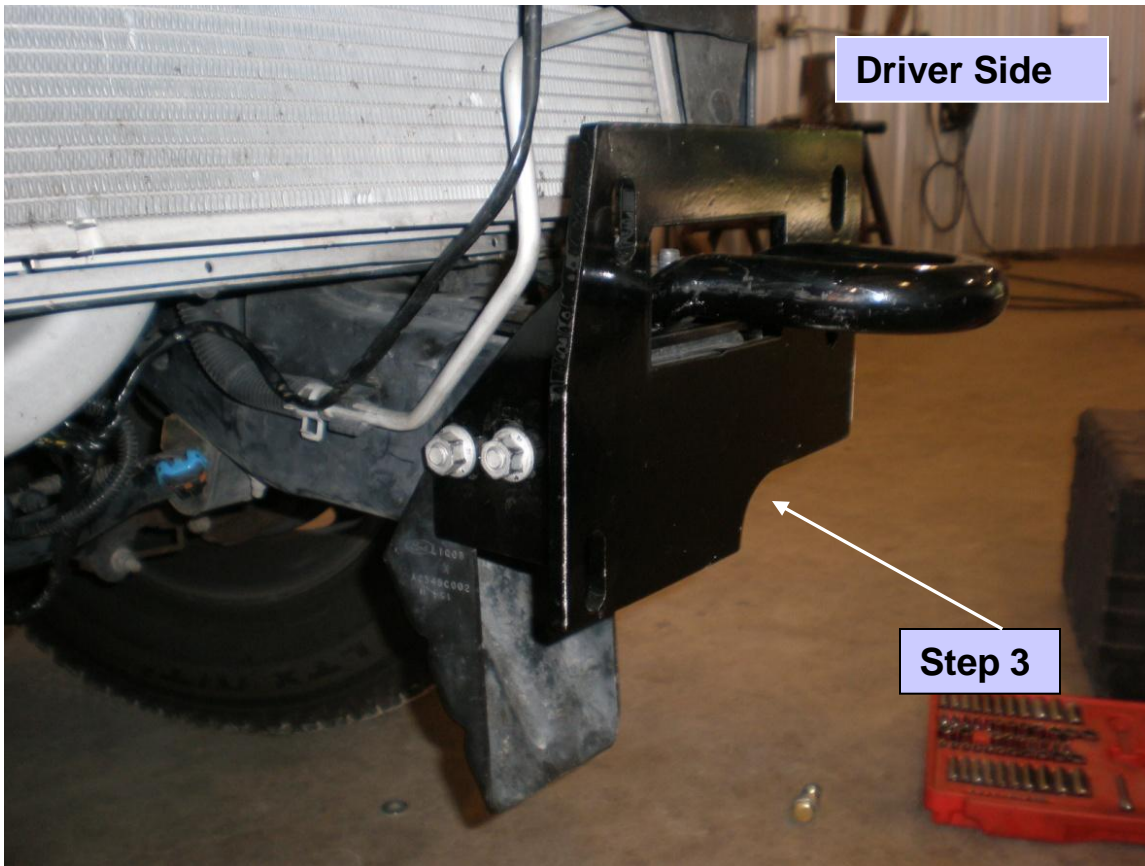

Driver Side

Step 3

- Step 1:** Remove factory bumper.
- Step 2:** Remove factory fog lights from factory bumper and attach to bracket provided. Attach this bracket and light to the pegs on the underside of FBR.
- Step 3:** Removing factory tow hooks and install frame bracket and tow hooks as seen in picture above. Use factory bolts. **DO NOT REMOVE THE FACTORY CRASH PLATE.**
- Step 4:** Mount Front Bumper Replacement (FBR) to frame bracket installed in step 3.
- Step 5:** Check alignment of FBR to truck and tighten all bolts.