



**2010-2014 Dodge PRO SERIES 2500-3500**  
**Part # 130-41-0006 Installation instructions.**

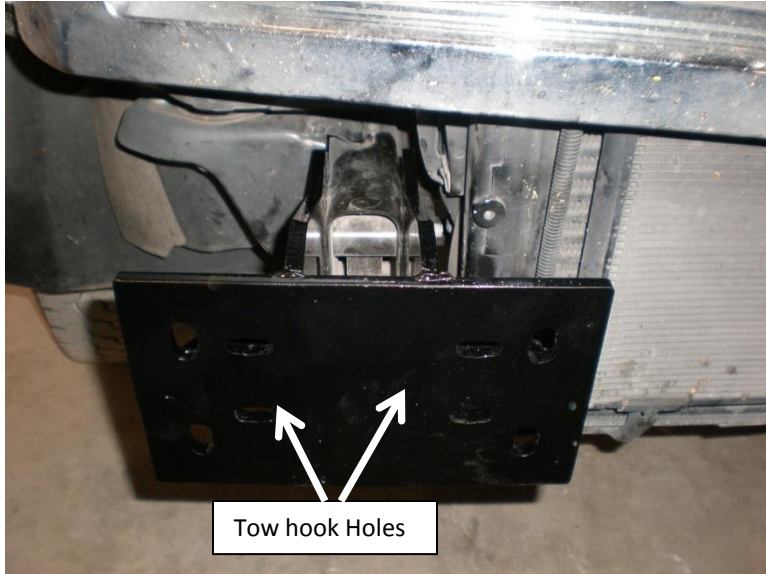

Tow hook Holes

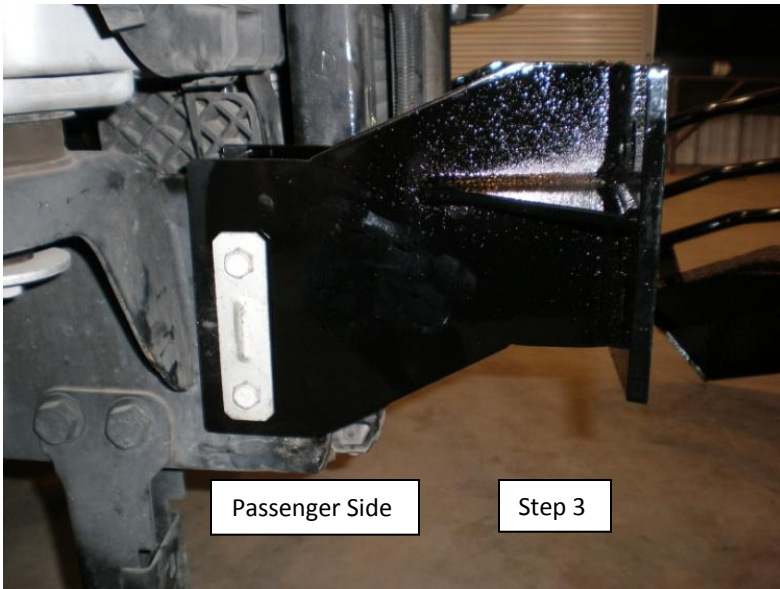

Passenger Side

Step 3

<b>Bolt Bag Contents</b>	
Quantity	Description
8	1/2" X 1 3/4" Bolts
8	1/2" Lock Washers
8	1/2" Hex Nuts
16	1/2" Flat Washers
8	10mm X 50mm Bolts
8	3/8" Lock Washers
16	3/8" Flat Washers
8	10mm Nuts
6	1/4" X 1" Bolts
6	1/4" Lock Washers
6	1/4" Hex Nuts
12	1/4" Flat Washers
110	Total Pieces

**Step 1:** Remove factory bumper by removing factory 18mm nuts (4) on the side of frame. DIESEL TRUCKS: Remove plastic grill cover on top of motor. Locate 2 13mm bolts from the turbo cooler and push the turbo cooler up and away from truck to remove the necessary frame bolts.

**Step 2:** Remove factory fog lights from bumper and install factory fog lights (if available) to front bumper replacement using factory bolts and nuts.

**Step 3:** Mount front mounting plates to frame horn using factory bolts that were removed earlier as seen in above picture.

**Step 4:** Mount FBR to the mounting plates installed in step 3 using the (8) 1/2" X 1 3/4" " bolts provided do not tighten until factory tow hooks have been installed using the provided 12mm X 45mm.

**Step 5:** Check alignment of front end replacement to truck from side to side and tighten bolts. Check alignment of front bumper replacement up and down to truck and tighten all bolts.