



**2013-2014 Dodge 1500 (NO SENSORS) Front Bumper Replacement (Part # 300-41-3004) + XFBR (Part # 600-41-3004) Installation instructions.**

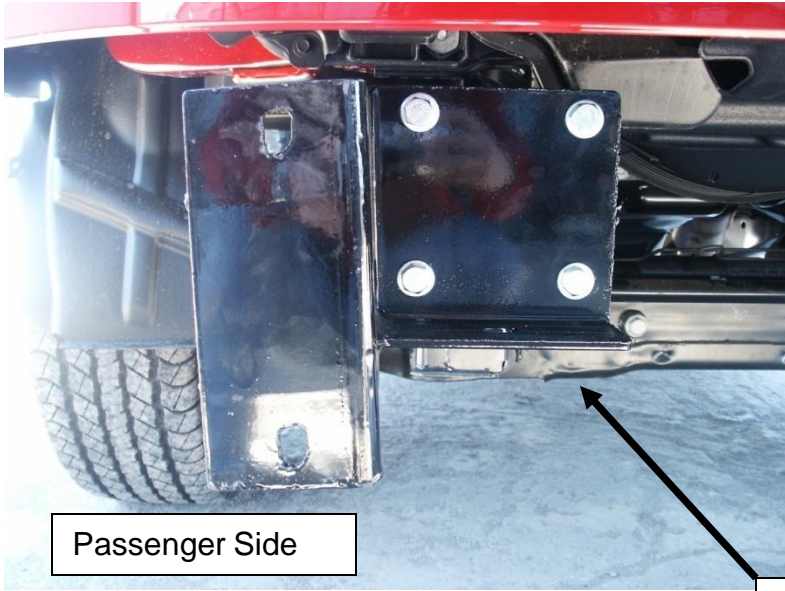

Passenger Side

Bolt Bag Contents	
Quantity	Description
8	12mm X 45mm Bolts
18	12mm Hex Nuts
24	1/2" Flat Washers
12	1/2" Lock Washer
4	1/2" X 1 3/4" Bolts
4	1/2" Hex Nuts
8	1/4" X 1" Bolts
16	1/4" Flat Washers
8	1/4" Lock Washers
8	1/4" Hex Nuts
110	Total Pieces

Step 3

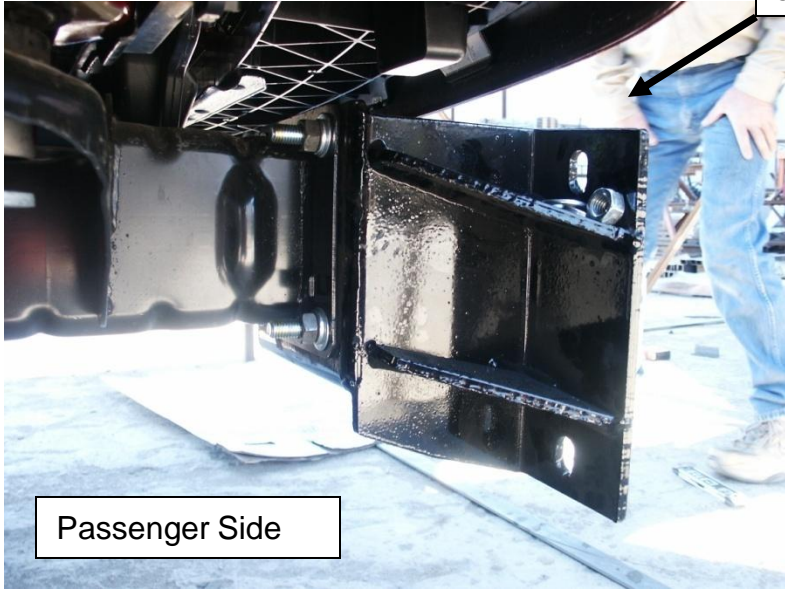

Passenger Side

- Step 1:** Remove factory bumper. Note: Do not remove factory tow hooks.
- Step 2:** Remove factory fog lights from bumper and install factory fog lights (if available) to front bumper replacement using 1/4" bolts provided.
- Step 3:** Mount Frontier brackets to frame horn using 12mm X 45mm bolts provided as shown in pictures.
- Step 4:** Mount Front Bumper Replacement to brackets using 1/2" X 1 3/4" bolts provided. Check alignment of front end replacement to truck from side to side and tighten bolts. Check alignment of front bumper replacement up and down to truck and tighten all bolts.
- Step 4:** Install factory license plate.