


94-02 Dodge 1500-3500 Front Bumper Replacement

Installation Instructions. Part # 300-49-8005

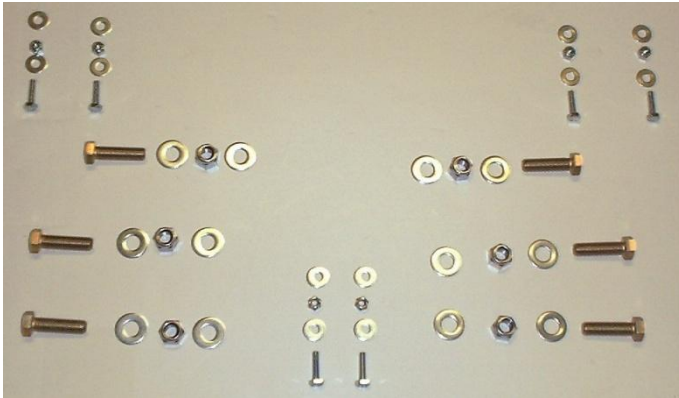

Bolt Bag

Bolt Bag Contents:

Quantity	Description
6	1/2" X 1-3/4" bolts
12	1/2" flat washers
6	1/2" Lock Washer
6	1/2" Hex Nuts
6	1/4" X 1" bolts
6	1/4" nuts
6	1/4" lock washers
12	1/4" flat washers
60	Total Pieces

Step 1: Remove factory chrome bumper from vehicle .

Step 2: Remove factory fog lights from chrome bumper and Install to Frontier front bumper replacements using 1/4 " bolts provided. Note: It is easier to install the fog lights (if available) prior to mounting the complete front bumper replacement.

Step 3: Mount front bumper replacement (not shown) to frame. Front bumper replacement bracket aligns to the inside of the vehicle frame rails (see picture).



Front Bumper Replacement Bracket



Driver Side Frame



Step 4: Check alignment of front bumper replacement to truck and tighten all bolts.