




# Installation Instructions

## Cat-Back Super Truck Exhaust

Chevy Silverado / GMC Sierra 1500 Truck  
Crew Cab, Short Bed, 4.8L-5.3L-6.0L 2/4wd  
Extended Cab, Standard Bed, 4.8L-5.3L 2/4wd

**\* Designed specifically for vehicles equipped with Active Fuel Management \***

Part #5639

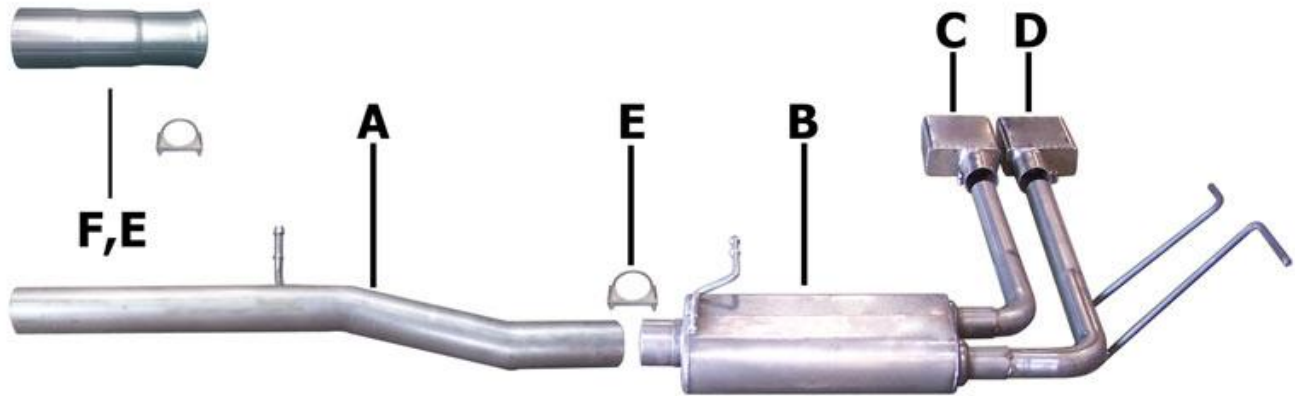

ITEM	PART	QUANTITY	DESCRIPTION
A	701118	1	3" Headpipe
B	11236-1	1	Superflow CFT Muffler Assembly
C	500430	1	Sport Truck Tip
D	500429	1	Sport Truck Tip
E	OHD300	2	3" Clamp
F	701092	1	Adapter

# Installation Instructions #5639

When installing this exhaust system make sure to use proper safety precautions. Use jack stands when working under the vehicle, set parking brake, block tires and use safety glasses and gloves. Allow exhaust to cool before attempting installation. Severe injury or burns could occur if safety measures are not taken.

**SUGGESTED TOOLS:** 1/2", 9/16", 15mm wrenches & sockets, WD-40, hacksaw, jack stands

1. Disconnect the negative battery cable before removal of OEM exhaust. This will allow the computer to reset and recognize the new exhaust. Lay out the exhaust on the floor so it looks like the drawing and compare parts with manual.



2. To remove stock exhaust, unclamp it at the ball connection behind the Y-pipe. Make sure to leave all rubber grommets in the factory location. **You will re-use stock clamp.** For easier removal of exhaust, cut behind the muffler. Use WD-40 to remove hangers from



5. Rotate the muffler assembly until the outlets are level.



3. Bolt adapter pipe #F to the stock dome re-using the factory clamp. Do not tighten, just make snug.



6. Install right and left stainless steel tips. Clamp down. When you have everything in place, firmly tighten all bolts and clamps down securely. Use stainless steel cleaner and a Scotch Brite pad weekly to prevent tip from discoloration. Inspect all fasteners after 25-50 miles of operation and re-tighten as necessary.



Next, install the headpipe #A into adapter pipe #F. Insert welded hanger into rubber grommet. Use clamp #E to secure together. **DO NOT TIGHTEN.**



4. Slide the muffler assembly into the headpipe at least 1.5"-2". Use a jack stand to support the muffler assembly. Use clamp #E to secure muffler assembly to the headpipe. Do not tighten. Insert welded hangers into rubber grommets.