


INSTRUCTION MANUAL

CAT-BACK STAINLESS SINGLE REAR EXHAUST NISSAN XTERRA

4.0L 4WD 4DR

PART # 612215

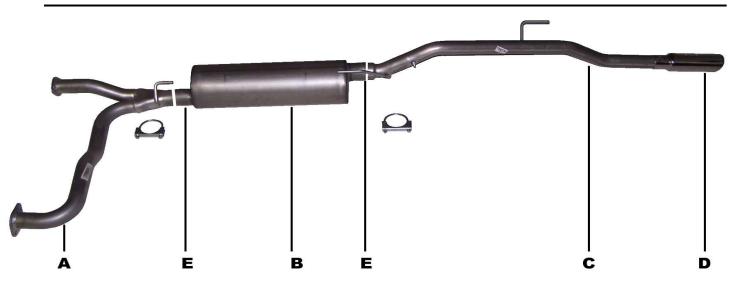

ITEM	PART #	QTY	DESCRIPTION
B 422 C 96 D 500	3-700631S 1887 7-700734S 0374 D300	1 1	2.50" STAINLESS Y-PIPE W/GP-110 FLG STAINLESS SUPERFLOW MUFFLER 2.50" STAINLESS TAILPIPE W/WELDED HGR 3.50" STAINLESS TIP 3.00" CLAMP

EXHAUST INSTALLATION #612215

When installing this exhaust system make sure to use proper safety precautions. Use jack stands when under the truck, set parking brake, block tires and use safety glasses and gloves.

DO NOT WORK WITH HOT PIPES!

SUGGESTED TOOLS:

1/2", 9/16", 14MM &12MM Socket, WD-40, Jack Stand, Hacksaw



LAY OUT THE GIBSON EXHAUST ON THE FLOOR AND COMPARE PART #'S TO THE DRAWING. TO REMOVE THE STOCK EXHAUST REMOVE IT FROM THE 2 BOLT FLANGES, LOCATED IN FRONT OF YOUR FACTORY MUFFLER. NEXT, CUT IFF YOUR STOCK TAILPIPE BEHIND YOUR MUFFLER. DO NOT DISGARD YOUR FACTORY HARDWARE, YOU WILL RE-USE IT.



INSTALL OVERAXLE TAILPIPE # C INTO MUFFLER 1 ½"-2". SECURE TO THE MUFFLER U SING CLAMP # E . DO NOT TIGHTEN.



INSTALL Y-PIPE # A ONTO YOUR EXISTING STOCK FLANGES. INSERT HANGER INTO RUBBER GROMMET. USE YOUR FACTORY HARDWARE TO SECURE. DO NOT TIGHTEN.



INSTALL YOUR
STAINLESS TIP TO
YOUR DESIRED LOOK.
NOW GO BACK AND
TIGHTEN ALL YOUR
FLANGES, CLAMPS,
ETC. STARTING FROM
THE FRONT AND
WORKING YOUR WAY
BACK. TO CLEAN
YOUR STAINLESS TIP
USE A STAINLESS
CLEANER.



INSTALL MUFFLER # B ONTO HEAD PIPE # A 1-1/2" TO 2" WITH THE LOUVERS FACING TOWARDS THE CONVERTER. USE A JACK STAND TO SUPPORT THE MUFFLER. USE CLAMP # E. TO SECURE THE MUFFLER TO THE HEAD PIPE. DO NOT TIGHTEN. MUFFLER INLET IS LOOKING INTO THE LOUVERS. OUTLET OF MUFFLER WILL BE AT THE 1 O'CLOCK POSTION.

INSTALL OVERAXLE TAILPIPE # D INTO MUFFLER 1 ½"-2" INSERT WELDED HANGER INTO RUBBER GROMMET USE CLAMP # G TO SECURE PIPE TO MUFFLER.

MAKE SURE YOU HAVE A 1" CLEARANCE ON ALL RUBBER BRAKE LINES, SHOCK BOOTS, TIRES, FUEL LINES, ETC...

GIBSON PERFORMANCE EXHAUST EXHAUST EXHAUST SYSTEMS