




INSTRUCTION MANUAL
CAT-BACK STAINLESS SINGLE EXHAUST
SILVERADO /SIERRA 1500 TRUCK
EXTENDED CAB, SHORT BED 4.3L, 4.8L, 5.3L 2/4WD
EXTENDED CAB, SHORT BED QUAD STEER 5.3L 2WD
CREW CAB, SHORT BED 1500 NON-HD 5.3L 2/4WD
1500 CLASSIC, CREW CAB, SHORT BED 4.8L, 5.3L 2/4WD
1500 CLASSIC, EXT CAB, STANDARD BED 4.3L, 4.8L, 5.3L 2/4WD
PART # 615536

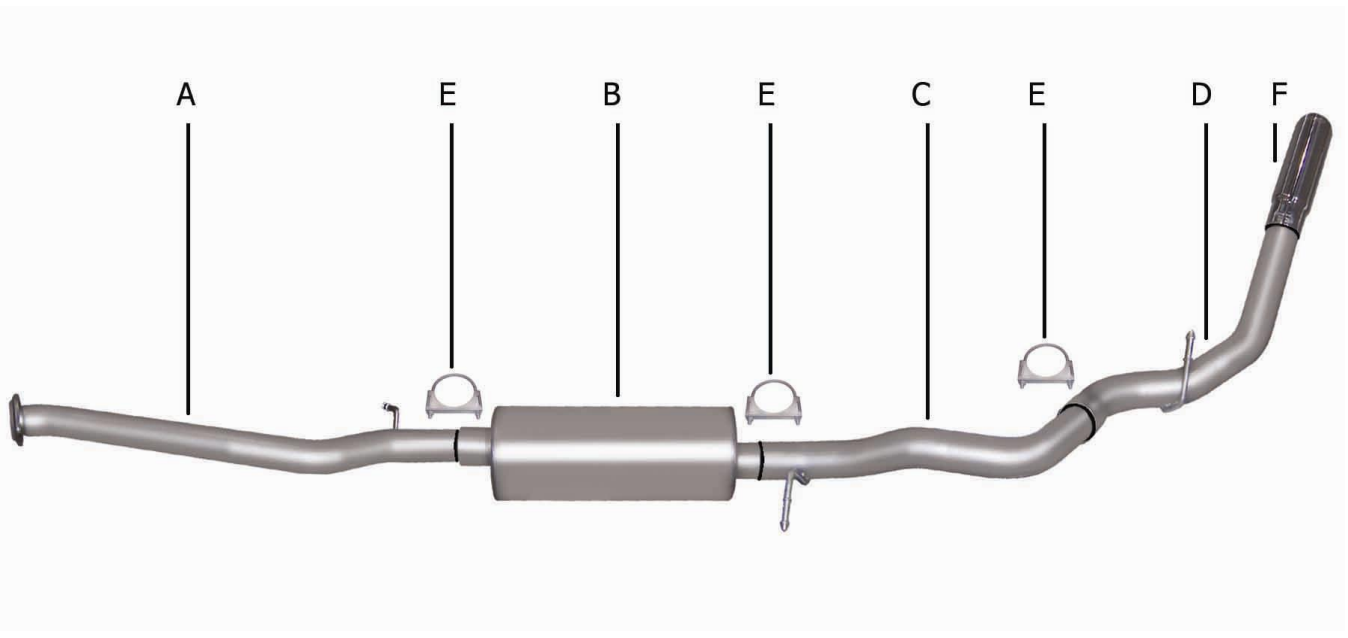

ITEM	PART #	QTY	DESCRIPTION
A	504-700394S	1	STAINLESS HEADPIPE WITH FLANGE #GP-115
B	421887	1	STAINLESS SUPERFLOW MUFFLER
C	562-700431S	1	3" STAINLESS OVERAXLE TAILPIPE
D	563-700432S	1	3" STAINLESS EXIT PIPE
E	OHD300	3	3" CLAMP
F	500360	1	3 1/2" STAINLESS TIP


INSTALLATION INSTRUCTIONS#615536

WHEN INSTALLING THIS EXHAUST SYSTEM MAKE SURE TO USE ALL THE PROPER SAFETY PRECAUTIONS. USE JACK STANDS WHEN UNDER THE VEHICLE, SET THE PARKING BRAKE, BLOCK TIRES AND USE SAFETY GLASSES. **DO NOT WORK WITH HOT PIPES!!!**

SUGGESTED TOOLS:

15MM SOCKET, 9/16" SOCKET, 1/2" WRENCH & SOCKET, JACKSTANDS, HACKSAW, WD-40

LAY OUT THE EXHAUST AND COMPARE THE PART NUMBERS TO THE MANUAL

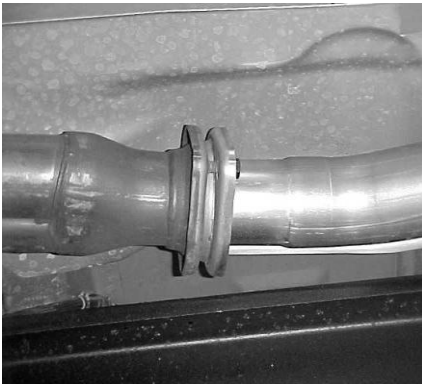


TO REMOVE STOCK EXHAUST UNBOLT THE STOCK EXHAUST AT THE FLANGE BEHIND THE Y-PIPE AND REMOVE. MAKE SURE TO LEAVE ALL RUBBER GROMMETS IN THE FACTORY LOCATION. **YOU WILL RE-USE STOCK NUTS AND BOLTS.** FOR EASIER REMOVAL OF EXHAUST, CUT BEHIND THE MUFFLER. USE WD-40 TO REMOVE HANGERS FROM GROMMETS.




INSTALL OVERAXLE TAILPIPE #C INTO THE OUTLET OF THE MUFFLER 1 1/2" TO 2" USING CLAMP #E TO SECURE PIPE TO MUFFLER. INSERT WELDED HANGER INTO RUBBER GROMMET.



BOLT HEADPIPE #A TO THE STOCK FLANGE RE-USING THE FACTORY NUTS & BOLTS. INSERT WELDED HANGER INTO RUBBER GROMMET. DO NOT TIGHTEN.

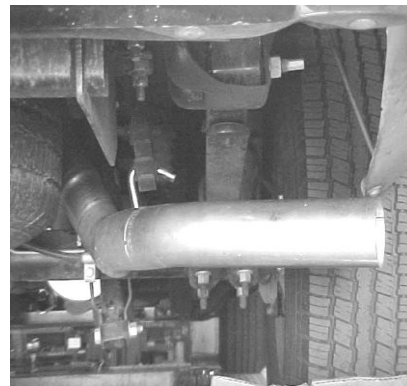

INSTALL EXIT PIPE #D ONTO OVERAXLE TAILPIPE USING CLAMP # E TO SECURE. ROTATE EXIT PIPE UNTIL IT IS AT THE CORRECT ANGLE FOR YOUR TRUCK. INSERT WELDED HANGER INTO RUBBER GROMMET.

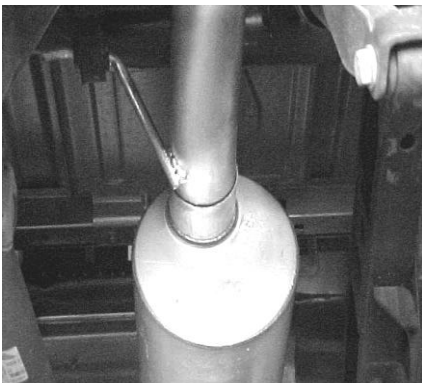

NEXT CONNECT THE MUFFLER TO THE HEADPIPE 1 1/2" TO 2" USING CLAMP #E. TO SECURE MUFFLER TO PIPE, USE JACKSTANDS TO SUPPORT THE MUFFLER. THE OUTLET OF THE MUFFLER WILL BE AT APPROXIMATELY 11 O'CLOCK. THE MUFFLER INLET IS LOOKING INTO THE LOUVERS. DO NOT TIGHTEN.



INSTALL THE STAINLESS STEEL TIP. NOW, FIRMLY TIGHTEN EVERYTHING ALL CLAMP, HANGERS, BOLTS, FLANGE. TO CLEAN TIP USE ANY STAINLESS CLEANER WITH A SCOTCH BRITE PAD.

MAKE SURE YOU HAVE A 1" CLEARANCE FROM ALL BRAKE LINES, FUEL LINES, SHOCKS, TIRES, ETC.