



Installation Instructions


Cat-Back Stainless Dual Rear Exhaust System

Dodge Charger SRT8, 6.1L

Dodge Magnum SRT8, 6.1L

Chrysler 300C SRT8, 6.1L

Part #617004

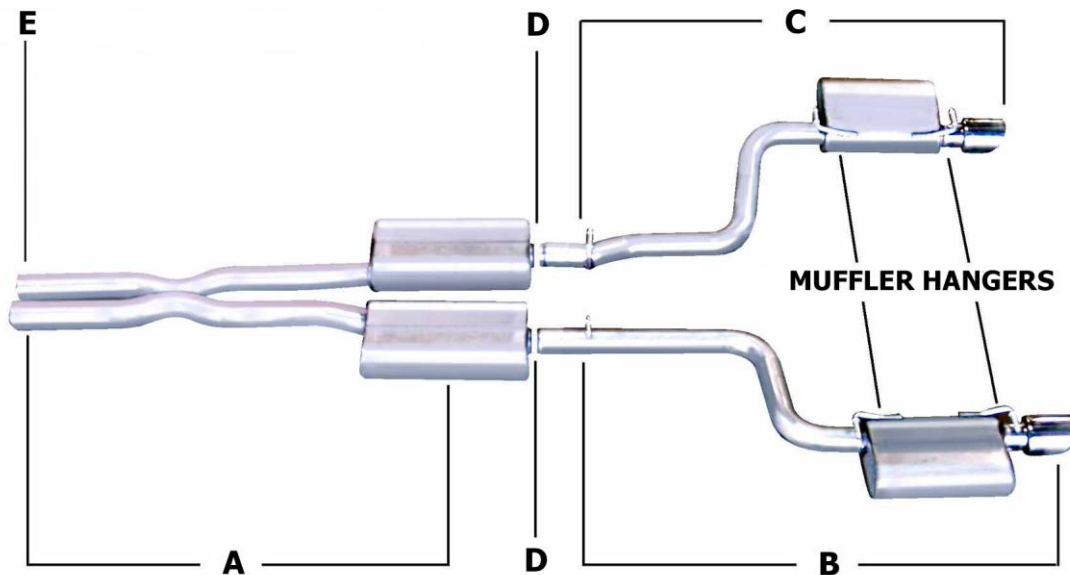

ITEM	PART	QUANTITY	DESCRIPTION
A	1188-700948S	1	2.5" Stainless X Pipe / Muffler Assembly
B	1189-700949S	1	2.5" Stainless Driver side tailpipe / Muffler Assembly
C	1190-700950S	1	2.5" Stainless Passenger side tailpipe / Muffler Assembly
D	5757	2	2.5" Clamp
E	5758	2	2.75" Clamp

Installation Instructions #617004

When installing this exhaust system make sure to use proper safety precautions. Use jack stands when working under the vehicle, set parking brake, block tires and use safety glasses and gloves. Allow exhaust to cool before attempting installation. Severe injury or burns could occur if safety measures are not taken.

SUGGESTED TOOLS: 1/2", 9/16", 15mm wrenches & sockets, WD-40, hacksaw, jack stands

1. Disconnect the negative battery cable before removal of OEM exhaust. This will allow the computer to reset and recognize the new exhaust. Lay out the exhaust on the floor so it looks like the drawing and compare parts with manual.



2. To remove the stock exhaust, first you must remove the factory cross member under the X pipe. Then unbolt and remove driver side tailpipe at the flange. Now unbolt and cut tack welds on factory clamps at the X pipe and carefully remove factory exhaust, save clamps for new exhaust installation. The 2.75" clamps are included in case you can't use the factory clamps. Leave all rubber grommets on hangers. Use WD-40 to help remove hangers.



6. Install passenger side tailpipe/muffler assembly #C. Insert all welded hangers into rubber grommets. Secure tailpipe with clamp #D. Do not tighten.



3. Install X pipe assembly #A assembly on to your front factory pipes and secure with factory clamps. Re-install factory cross member. Use a jack stand to support mufflers. Do not tighten.



7. Now go back and make sure the first two mufflers in the middle are level. Then push up on factory cross member before tightening clamps. Then tighten X pipe. Next, with both tailpipes in place tighten all bolts and clamps securely.



4. Install driver side tailpipe/muffler assembly #B. Insert all welded hangers into rubber grommets. Secure tailpipes with clamp #D. Do not tighten.



8. Use stainless steel cleaner and a Scotch Brite pad weekly to prevent tip from discoloration. Inspect all fasteners after 25-50 miles of operation and re-tighten as necessary.

GIBSON EXHAUST systems are designed on a factory stock vehicle. Any aftermarket products installed could increase the sound levels of the exhaust. **Make sure there is a 1" clearance from ALL rubber brake lines, shock boots, lines, tires, etc. to prevent heat related damage or fire.**