




PERFORMANCE EXHAUST SYSTEMS

INSTALLATION INSTRUCTIONS CAT BACK SINGLE EXHAUST FORD ESCAPE 3.0L 2/4WD

PART #619872

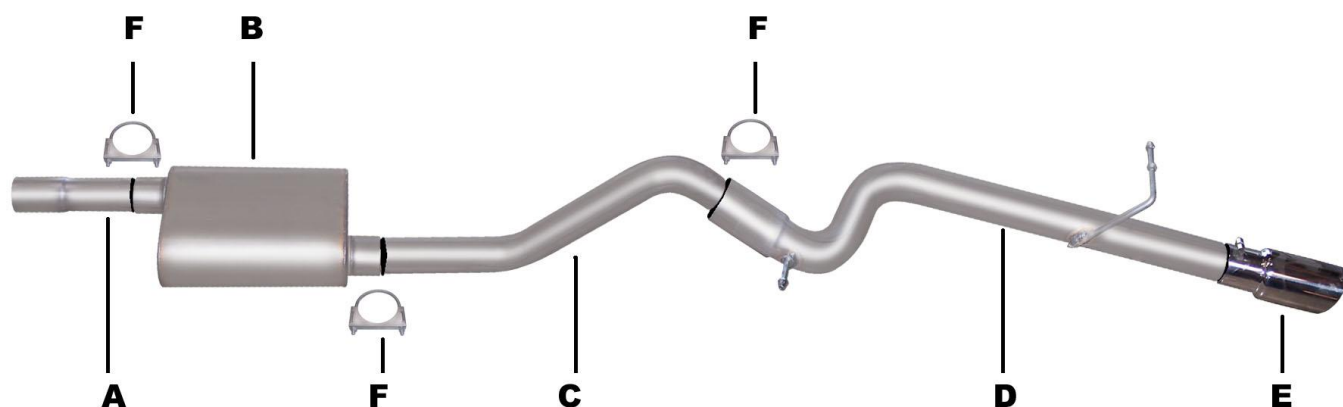

ITEM	PART #	QUANTITY	DESCRIPTION
A	999700742S	1	2 1/4" Stainless Steel Headpipe
B	13215S-1	1	Stainless Steel Superflow muffler
C	1056-700838S	1	2-1/4" Overaxle Tailpipe
D	1057-700839S	1	2-1/4" Exitpipe
E	500370	1	3" Stainless tip
F	5756	3	2 1/4" Clamp
G	BO-1028	1	Bolt kit for Headpipe

INSTALLATION INSTRUCTIONS #619872

CAREFULLY READ INSTRUCTIONS BEFORE STARTING INSTALLATION.

When installing this exhaust system make sure to use proper safety precautions. Use jack stands when working under the vehicle, set parking brake, block tires and use safety glasses and gloves. Allow exhaust to cool before attempting installation. Severe injury or burns could occur if safety measures are not taken.

SUGGESTED TOOLS: 1/2", 9/16" 15mm wrenches & sockets, WD-40, hacksaw, jack stands.

.....
● **Disconnect the negative battery cable before removal of OEM exhaust. This will allow the computer to reset and recognize the new exhaust. Lay out the exhaust on the floor so it looks like the drawing and compare parts with manual.**
.....

SUGGESTED TOOLS: 1/2", 9 /16" 15 mm Wrench & Socket, WD-40, Hacksaw, Jack Stand




1. To remove the stock exhaust remove it from clamp located in front of the stock muffler. Disengage the welded hangers using WD-40 from the OEM rubber grommets. Do not damage or remove the rubber grommets as you will re-use them to mount your new system. Now, un-bolt tailpipe and remove exhaust.



2. Install head pipe #A onto your existing stock front pipe and attach with clamp #F. Use a jack stand to support the converter. DO NOT TIGHTEN.



3. Install muffler #B onto head pipe 1 1/2"-2" with the louvers facing towards the converter. Use a jack stand to support the muffler. Use clamp #F to secure the muffler to the headpipe. DO NOT TIGHTEN.

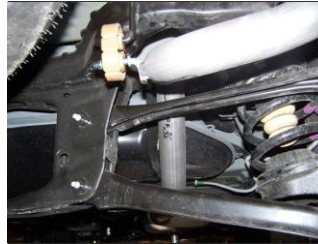

4. Install tailpipe #C into the muffler 1 1/2"-2" secure with clamp #F. DO NOT TIGHTEN.



5. Next, install the exit pipe #D. Use clamp #F to secure to the tailpipe. DO NOT TIGHTEN. Insert welded hanger into rubber grommet.



6. Install stainless steel tips #E. Clamp down. When you have everything in place, firmly tighten all bolts and clamps down securely. Use stainless steel cleaner and a Scotch Brite pad weekly to prevent tip from discoloration.



GIBSON EXHAUST systems are designed on a factory stock vehicle. Any aftermarket products installed could increase the sound levels of this Exhaust. **Make sure there is a 1" clearance from ALL rubber brake lines, shock boots, fuel lines, tires, etc to prevent heat related damage or fire.**